ROYAL IANUAT



FOREWORD

More Power, Love and Respect. The all - new Bullet 350-KS/ES features a modern Unit Construction engine with 5 gears on the left. Easier to ride, more torque and no maintenance trouble.

This manual is designed to give you complete control over your motorcycle. It contains important information on efficient operation and maintenance. We've also included tips on riding safely, as well as suggestions to enhance your motorcycling experience.

Your safety is of prime concern to us and we urge you to be a responsible rider. Please select your riding gear carefully in accordance with your terrain, style and weather conditions. And ensure the same for your pillion rider as well. Respect the law of the land and ride safe.

Finally, we welcome you to the Royal Enfield community. You can locate your nearest club or sign up for the next big ride at www.royalenfield.com

The legend rides on.

NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

NOTE: BS IV This motorcycle meets Emission Norms - Bharat (Trem) Stage - IV

"© Copyright 2019 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

Contact Us:

Royal Enfield Support: 1800-2100-007 Email: support@royalenfield.com Twitter: @RoyalEnfieldSupport Web: www.royalenfield.com

Part No. RAM00181/A / Qty. 500 / July '19

CONTENTS

4	Wheel Removal & Assembly	34
5	Minor Maintenance Tips	37
8	Long Trip Precautions	51
9	Washing Procedure	52
10	Storage Precautions	53
11	Trouble Shooting	54
14	Warranty Terms & Conditions	56
20	•	59
21	•	62
22		
23	Environment Care	64
26	Service Coupons	66
27	Paid Service & Maintenance Record	85
28	Regional & Area Offices	87
29	Authorised Dealer Address	88
33	Notes	127
	5 8 9 10 11 14 20 21 22 23 26 27 28 29	5 Minor Maintenance Tips 8 Long Trip Precautions 9 Washing Procedure 10 Storage Precautions 11 Trouble Shooting 14 Warranty Terms & Conditions 20 Emission Warranty 21 EVAP 22 Environment Care 23 Service Coupons 26 Service & Maintenance Record 27 Paid Service & Maintenance Record 28 Regional & Area Offices 29 Authorised Dealer Address

Name Door No./Street Locality City State Pin Contact Nos. Off: Res: Mobile: Email: Engine No. Battery No. Frame No. Battery make Reg. No. Licence No. Date of Sale Valid till dt. Model Key No. :

Motorcycle Installation Form (MIF) No.

Tyre make Sold by

PERSONAL & MOTORCYCLE INFORMATION

Colour

Dealer Code

TECHNICAL SPECIFICATIONS

ENGINE	_	IGNITION SYSTEM	
Engine Type	Single Cylinder 4 Stroke, Twinspark, Air cooled	Ignition system	Digital Dual Spark Ignition, TCI System
Bore	70mm	Spark plug Electrode gap	WQR8DC : 0.80 to 0.90 mm
Stroke	90mm		UR6DC : 0.70 to 0.80 mm
Swept volume	346cc	Spark plug	WQR8DC M14 (Bosch) &
Compression ratio.	8.5:1		UR6DC M10 (Bosch)
Maximum Power	19.8 bhp @ 5250 rpm	TRANSMISSION	
Maximum Torque Idle RPM	28 Nm @ 4000 rpm 1050+200	Clutch	Wet multiplate (6 plates)
	_	Primary drive	Duplex chain
Starting	Kick Start (Bullet 350 KS)	•	2.15 : 1
	E-Start (Bullet 350 ES)	Primary ratio	=::
Air filter element	Paper element	Gear box	Constant Mesh, 5 Speed
Lubrication	Wet sump	Gear Ratio	1st 3.06:1 2nd 2.01:1
Engine oil capacity	2.75 litres (First Fill only)		3 rd 1.52:1 4 th 1.21:1
	2.30 to 2.50 litres (subsequent refills)		5 th 1:1
Engine oil grade	SAE 15W 50 API SL Grade	Pin orl aluissa	• • • • • • • • • • • • • • • • • • • •
	JASO MA 2 Semi Synthetic	Final drive	15 Teeth (Sprocket)
Fuel Supply	29mm, Constant Vacuum Carburetor	Final Ratio	2.533:1
Cooling	Natural air flow	Drive Chain links	100 links
5		5	

TECHNICAL SPECIFICATIONS

CHASSIS	
Туре	Single downtube, using engine as stressed member
Frame	Tubular
Suspension	
Front	Telescopic, 35mm forks, 130mm travel
Rear	Twin shock absorbers with 5 step adjustable preload, 80mm travel.
Brakes	
Front	280mm Disc, 2-Piston caliper With ABS
Rear	153mm Drum, Single Lead Internal Expanding
Tyre size	
Front	3.25×19 4PR
Rear	3.25×19 4/6 PR

Tyre Pressure	
Solo	00
Front	20 psi/1.41 kg/cm ²
Rear	30 psi/2.11 kg/cm ²
With Pillion	
Front	22 psi/1.55 kg/cm ²
Rear	32 psi/2.25 kg/cm ²
Steering lock	In built
Fuel tank capacity	13.5 litres approx. *
Low fuel warning	3.5 litres approx. *
* The above values are c capacity will vary from	approximate and the actual fuel filling the values mentioned.
ELECTRICALS	
Generation	Alternator
System : E-Start	12V - DC (III Phase)

Generation	Alternator		
System : E-Start	12V - DC (III Phase)		
Kick Start	12V - AC / DC (I Phase)		
Battery : E-Start	12V - 8 Ah MF		
Kick Start.	12V - 5 Ah (I Phase)		
Head lamp	12V, HS1-35/35W (Halogen)		

TECHNICAL SPECIFICATIONS

Position lamp	12V, 4W
Warning Indicator lamp	12V, 1.7 W X 3 Nos.
Brake/Tail lamp	12V, P21/5W
Parking lamp	12V, 2W X 2 Nos.
Speedometer lamp	12V, 3.4W
Hi beam indicator	12V, 1.7W
Neutral lamp tell tale	12V, 1.7W
Turn signal tell tale	12V, 1.7W
Turn signal	12V, R10W X 4 Nos.
Horn	12V, 2.5 Amp (Max.)
Starter Motor	12V, 0.7 Kw

WARNING

Using bulbs/other electrical gadgets other than specified rating may lead to over loading/erratic behaviour/premature failure of electrical system.

Modifications on the motorcycle which are not approved by Royal Enfield may not only disqualify for warranty, but also affects performance of the motorcycle.

DIMENSIONS

Length	2140 mm
Width	810 mm (Without Mirrors)
Height	1120 mm (Without Mirrors)
Wheel base	1395 mm
Ground clearance	135 mm
Saddle Height	800 mm

WEIGHTS

Kerb weight (90% fuel & oil)

E-Start	189 Kgs. (Bullet 350-ES)
Kick Start	185 Kgs. (Bullet 350)
Max. Pay load	161 Kgs. (Bullet 350-ES)
	165 Kgs. (Bullet 350)

- Values / Dimensions given above are for your guidance only.
- In view of continuous improvements being done on our products, the specifications are likely to change without prior notice.

RECOMMENDED LUBRICANTS

	Engine Oil		
Grade	SAE 15W 50 API SL Grade & Above JASO MA2 Semi Synthetic		
Capacity	2.75 Ltrs. (First Fill only) 2.30 to 2.50 Ltrs. (during oil & filter element replacement in periodical maintenance)		

Front	Fork Oil	Brak	e Fluid
Grade	Royal Enfield Front Fork Oil (or 1F Grade Endurance)	Capacity Front: 100	
Capacity	195 ml/leg	Grade	DOT 4

DO NOT Mix DOT 4 & other brake fluid together.

CAUTION

Use of Wrong grade oil will reduce the life of the moving parts and seriously affect performance

NOTE

Recommendation subject to change without notice.

ISO 14001 Operation Control Process

As per the guidelines in the ISO 14001 Environmental Management System, customers are advised to carry out timely replacement of Engine, Front Fork and Brake oils, ONLY through a Royal Enfield Authorised Dealer / Service Center for the safe disposal of the used oils to prevent Environmental pollution.

In case the oils are replaced privately, it is advised to ensure the old/removed oils are collected carefully and reached to a certified disposal agency, nearest to you to safely disposing the oils.

Similarly, hazardous wastes such as old/discarded Batteries, Tyres, Tubes, Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

SAFETY DEFINITIONS

The information given under the titles: Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.



WARNING

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

CAUTION

This message if disregarded may result in damage to the motorcycle.

NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

MOTORCYCLE IDENTIFICATION NUMBERS

FRAME NUMBER

Punched on steering head tube right side.




ENGINE NUMBER

Punched on crankcase left top side.



LOCATION OF KEY PARTS

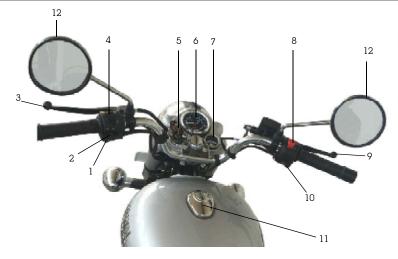

- 1. Horn Button
- 2. Turn Signal Switch
- 3. Clutch Lever Left
- 4. Head Lamp Dip Switch
- 5. Ignition Switch
- 6. Speedo Meter
- 7. Warning Indicator
- 8. Engine Kill Switch
- 9. Brake Lever Front
- 10. E-Start Switch
- 11. Fuel Tank Cap
- 12. Rear View Mirrors

LOCATION OF KEY PARTS



- 1. Right Trafficator Rear
- 2. Air filter Box Right
- 3. Resonator Box
- 4. Carburetor
- 5. Pilot Lamp Right
- 6. Head Light
- 7. Number Plate Front
- 8. Right Trafficator Front
- 9. Steering lock
- 10. Brake Pedal
- 11. Kick Start Lever
- 12. Shockabsorber Rear

LOCATION OF KEY PARTS



- 1. Left Trafficator Front
- 2. Pilot Lamp Left
- 3. Fuel Tank
- 4. Fuel Tap
- 5. Battery Box Cover
- 6. Seat
- 7. Left Electricals & Tool Box
- 8. Left Trafficator Rear
- 9. Tail Lamp
- 10. Number Plate Rear
- 11. Canister
- 12. Side Stand
- 13. Center Stand
- 14. Gear Shift Lever
- 15. Horn
- 16. ABS Module

STEERING LOCK

- Turn Clockwise to lock
- Turn Anticlockwise to Unlock



BATTERY BOX

■ Turn anti clockwise to open



FILTER / ELECTRICAL / BOXES

■ Turn anti clockwise to open



IGNITION SWITCH

Ø OFF

O ON



FUEL TANK CAP

OPEN


■ Turn Key Clockwise & lift the lid

CLOSE

■ Gently press lid till it "click" into lock position.



FUEL TANK

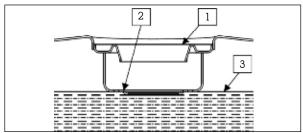

- 1. Fuel Tank Mouth
- 2. Fuel Level Plate
- 3. Maximum Fuel Level



WARNING

Do not overfill the fuel tank. Fill upto maximum fuel level & stop filling when the fuel reaches the bottom of Splash Arrestor.

Failure to do so will lead to canister damage Or can cause fuel spill out of fuel tank.

Petrol is highly explosive. Please ensure there are no open flames or sparks nearby while refueling and fill fuel tank only in a well ventilated area.

Please ensure petrol does not spill on painted surfaces. Wipe immediately incase fuel spills over as otherwise it will leave a permanent stain on the painted surfaces.

NOTE

- Key is common for ignition, petrol tank cap, steering lock, battery cover and tool boxes.
- Key can be removed only in locked position from fuel tank, Filter box, Electrical boxes locks in "OFF" position from Ignition switch.
- Turn handle bar to extreme left, before attempting to lock steering.



WARNING

DO NOT switch OFF ignition while riding the motorcycle. Doing so can cause a potential accident, resulting in serious injury to both rider and other road users, besides causing severe damage to the motorcycle.



! WARNING (BULLET 350 - ES)


Turn off ignition switch when engine is not in running condition. Failure to do so will discharge the battery due to continuous head lamp ON.

ENGINE STOP SWITCH





E-START SWITCH (BULLET 350 - ES)







Do not press the starter button more than 5 sec. After three successive cranking, wait for 30 sec battery to recover.

HORN

Press



DAY FLASH

Press for Head Light Flash



DIMMER SWITCH

High beam





TURN SIGNAL SWITCH

← Left turn signal ON

OFF (Push to off)

ightharpoonup Right turn signal ON



CHOKE

ON OFF




FUEL TAP

 \prod Main ON



← OFF







CAUTION

■ Choke should be used only to start engine in cold climates (less than 20°C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.

PRE OPERATIONAL CHECKS

CHECK FOR

- 1. Petrol level in the tank and leakage if any.
- Smooth operation and free play in Front and Rear Brake levers.
- 3. Free play and smoothness of all operating controls.
- 4. Free movement of steering.
- 5. Any cuts, cracks in the tyre and correct tyre pressure.
- 6. Operation of all electrical equipments.

Front Brake



Brake Pedal

7. Brake Fluid level is above the "MIN" mark in the master cylinder.



FRONT BRAKE

8. Engine Oil Level is between "MAX & MIN" Level.



NOTE

Start engine, run for 2 minutes before checking Engine Oil Level.

SAFE & HAPPY RIDING

RIDING DRESS

- A proper riding apparel
- Proper Riding Boots
- Soft Leather Gloves
- Goggles or spectacles
- An ISI Certified helmet. (Affix light reflecting strips of stickers on the front and rear of the helmet for good visibility at night).

NOTE

A light coloured shirt enables greater visibility to other road users especially during nights.

CAUTION

Loose clothing may get caught on moving parts of the motorcycle.

SITTING POSTURE

Correct sitting posture is a must for stable and safe riding.

- Sit Straight with your shoulders completely relaxed.
- Keep your elbows close to your body.
- Hold the handle grip close to its inner end.
- Slightly grip the fuel tank with the knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

BRAKING

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.

WARNING

Applying any one of the brakes suddenly may cause the motorcycle to skid.

RUNNING IN PERIOD

The Royal Enfield Motorcycle as you would be experiencing, is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

- During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
- 2. Do not exceed maximum specified pay load.
- Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
- Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
- 5. Avoid sudden accelerations and racing starts.

Motorcycle Gear Speed	First 500 kms.	501 - 2000 kms.
1	15 KMPH	20 KMPH
2	25 KMPH	30 КМРН
3	30 КМРН	40 KMPH
4	45 KMPH	55 KMPH
5	60 KMPH	70 KMPH

WARNING INDICATIONS & SAFETY SYSTEMS

YOUR MOTORCYCLE IS FITTED WITH THE FOLLOWING WARNING INDICATIONS AND SAFETY SYSTEMS:

1. LOW FUEL INDICATION

The Low fuel indication in the small meter will glow if the fuel level in the fuel tank is approximately 3.5 ± 0.5 Lts.

Please ensure the motorcycle is not used with the low fuel indicator lamp "ON" continuously. It may not only result in the motorcycle running out of fuel.



2. ANTI-LOCK BRAKING SYSTEM (ABS)

Anti-Lock Braking System (ABS) will help prevent the brakes from locking the wheels, during sudden application of the brakes at high speeds. This will help the rider to have better traction and control over the motorcycle and prevent the motorcycle from skidding which can cause a accident.



In the event of sudden and hard application of the brakes by the rider, the sensors in the braking system will signal the ABS moderator to momentarily and continously reduce the hydraulic pressure and thereby

WARNING INDICATIONS & SAFETY SYSTEMS

prevent the brakes from locking the wheels while reducing the speed of the vehicle. This will help the rider to control the motorcycle.

An ABS indicator lamp is provided in the console (as shown in adjacent image) to warn the rider in the event of any malfunction of the ABS.

When the ignition and kill switch are switched 'ON', the ABS sign light up and remain 'ON' till the motorcycle attains a speed of 5 Kmph (3MPH) and switch 'OFF'. This indicates the ABS is working properly. In the event the lamp does not switch 'OFF' and remains continously 'ON' at higher speeds, it is recommended not to drive the motorcycle and get the brake system inspected and corrected through a nearest authorized Royal Enfield Distributor. Failure to do so can result in a serious injuries and loss of life.

CAUTION: (ABS)

ABS is a safety feature to help prevent locking of wheels during sudden application of brakes. It is by no means a substitute for good riding practices and anticipatory braking.

Please ride carefully and apply brakes cautiously, especially while cornering. ABS cannot estimate the "weight shifts" and momentum of the motorcycle while negotiating a corner and therefore prevent skidding due to loss of traction.

Please anticipate the stopping distance required for the speed of travel and apply brakes well in advance so as to bring the motorcycle to a safe stop.

Please apply both brakes to stop - front brake momentarily earlier, followed by rear brake, to have better traction and control of the motorcycle

Always ensure that you ride well within the legal speed limits.

Failure to adhere to the above can cause an accident resulting in serious injuries and loss of life.

WARNING INDICATIONS & SAFETY SYSTEMS

DO'S & DON'T'S : (ABS)

DO'S		DON'TS	
•	While starting the engine do check the ABS indicator comes ON and switches OFF when the vehicle speed exceeds 5 km/h (3.1 mph).	-	DO NOT RELEASE the brake lever/pedal when pulsations are felt during hard application of the brakes in an emergency
•	Please ensure the front master cylinder brake fluid at MAX level and there is no leak in the brake system.		situation. The pulsations only indicate that the ABS is activated.
•	Apply both the brakes simultaneously for better efficiency while braking.	•	DO NOT APPLY only the front OR rear brake as it can lead to inefficient braking.
	In the event of the ABS indicator remaining continuously ON please take the motorcycle to a nearest authorized Royal Enfield service station to inspect the brakes system control of the vehicle.		

STARTING

Ensure Gear is in Neutral position and the Neutral lamp is glowing in the speedometer. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.

CAUTION

Do not attempt to shift gears without moving the motorcycle back and forth as it will damage the gears mechanism.

- Turn fuel tap to 'ON' "RESERVE" Position.
- Use choke if required in cold climatic conditions (below 20°C)
- Switch ON Ignition and the Stop Switch to "RUN" Position.

USING THE KICK START LEVER

- Slowly Crank Engine with the Kickstarter lever till a resistance is felt in the lever. Slightly crank slowly and further till the compression eases over.
- Release Kickstarter lever to enable it to come to its top resting position.
- Apply a powerful swinging Kick on the lever to start the engine. It may be necessary to open the throttle, very slightly, when starting on choke/first time in the morning.
- Release Choke if applied and allow Engine to run at idling speed for a few minutes.

USING ELECTRIC START

- Depress and Hold the Clutch Lever.
- Press Starter Button and hold till Engine starts. Do not release the button before Engine starts.



GEAR SHIFTING, RIDING & STOPPING


NOTE

- Release the Starter button as soon as the Engine starts.
- If Engine does not start, wait for 30 seconds before pressing the starter switch.
- A Clutch switch is provided in the system for the safety
 of the rider. When the motorcycle is in gear, the
 motorcycle cannot be started. To start in gear
 depress the clutch lever and press Starter button to
 start engine.
- Warm up engine for 2 minutes.
- Depress clutch lever.
- Press gear pedal with toe to engage lst gear.
- Gently open throttle and release clutch lever simultaneously. If clutch is released suddenly, the engine may stall and cause the motorcycle to move with a jerk.
- To shift to 2nd and higher gears close throttle, depress clutch lever and press the gear pedal with heel.





To stop the motorcycle, close throttle, apply front and rear brakes. Simultaneously, shift gears into neutral just before the motorcycle comes to a complete stop.



■ Turn fuel tap 'OFF'









PARKING

PARKING MOTORCYCLE ON CENTER STAND

- Select a firm, flat surface.
- Hold handle bar straight.
- Lower center stand, and ensure that both the legs of the stand are resting evenly on firm ground.
- Apply pressure on the fulcrum lever on the center stand and pull motorcycle backwards, gently.



PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Lower side stand and gently tilt motorcycle to the left till it rests firmly.





Always park the motorcycle on a firm and flat surface. Parking in a soft ground may cause stand to sink and the motorcycle to fall, causing injury to you or to others and damage to the motorcycle parts.

The maintenance schedule detailed here will help you maintain your Bullet 350 - Kick / Electric Start Motorcycle meticulously and to get a long trouble free service. The schedule provided herein is based upon average riding conditions and indicates the Kms at which regular inspections, adjustments, replacements and lubrications are to be carried out. The frequency of the maintenance must be shortened depending upon the severity of the driving condition or if the motorcycle is used in a very dusty environment. Contact the nearest Royal Enfield Authorised Dealer / Service Center for expert advice and to carry out the required maintenance.

S1. No.				ERVICE r is earlier				PAID SERVICE					
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
1	Engine Oil	R	Ι	R	I	R	Ι	R	I	R	I	R	
		Check level at every 1000 kms or earlier and Top up as required										uired	
2	Engine oil filter element	R		R		R		R		R		R	
3	Engine sump filter (oil retainer)	С		О		О		С		О		С	
4	Spark plug	C&A	C&A	C&A	R	C&A	C&A	R	C&A	C&A	R	C&A	
5	Magnetic drain plug under gear box and secondary drain Plug under crankshaft in crankcase right	С		С		С		С		С		С	
6	HT leads for crack / damage	I	I	I	I	I	I	I	I	I	I	I	
7	Fuel Hose & Clip	I	I	I	I	I	I	I	I	R	I	I	

S1. No.	DESCRIPTION	FR: whic		ERVI		PAID			SERVICE				
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
8	Accelerator Cable free play	Adjust every 5000 kms or earlier as requ					required						
9	Rubber hose, Air filter to carburetor	I	I	I	I	I	I	I	I	R	I	I	
10	Rubber hose, Inlet manifold / Adaptor	I	I	I	I	Ι	I	Ι	Ι	R	I	I	
11	Evaporative Emission Equipment rubber hoses	I	I	I	I	Ι	I	Ι	Ι	R	I	I	
		С	U	R	U	R	U	R	C	R	U	R	
12	12 Air filter paper element		Clean / replace more frequently if operated in dusty condition										
13	Clutch Cable / lever free play	Adjust every 1000 kms or earlier as required							ed				
14	Rear brake pedal pivot							L					
15	Battery terminals (apply petroleum jelly)							С					
16	Earth wire eyelet contact	I	I	I	I	I	I	Ι	Ι	I	I	I	
17	Front Fork oil / Leak	I	I	I	I	R	I	I	I	R	I	I	
18	Rear Wheel Drive Chain	I&A Clean, Lubricate every 1000 Kms / Clean, Lubricate & Adjust every 5000 Kms or earlier as required											

S1. No.	DESCRIPTION		REE SERVICE ichever is earlier			I	PAID	SERVICE				
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
19	Steering ball races play	I&A	kA Inspect, Adjust & if required lubricate for every 500 or earlier as required. Replace if necessa						-			
20	Spokes tightness / Wheel rim run out front & rear	I	I	I	I	I	I	I	I	I	I	I
21	Swing Arm pivot bush & spacer	I	I Inspect & If required lubricate for every 5000 km or earlier as required. Replace if necessary									
22	Rear wheel cush rubbers	I	Ι	I	I	R	I	Ι	I	R	I	I
23	Tyre wear pattern (Front & Rear)	I	Ι	I	I	I	Ι	Ι	I	Ι	I	Ι
24	Disc Brake oil level check	I	Ι	I	I	R	I	Ι	I	R	I	Ι
25	Pivot-Side stand, Center stand, Pillion foot rest	L	L	L	L	L	L	L	L	L	L	L
26	* Carburetor	Clean, Inspect and Tune Carburetor Throttle body cleaner every 5000 kms / 6 Months or earlier as required										
27	Front brake hose, Banjo Bolt	I	I	I	I	I	I	I	I	I	I	I

 $^{^{*}}$ Refer Service Manual for proper maintenance of the carburetor & its tuning procedure.

S1. No.		FREE SERVICE whichever is earlier											
110.	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50	
	Months	1.5	6	12	18	24	30	36	42	48	54	60	
28	Hand levers & kick starter lever pivot		Lubri	cate	every	1000	Kms	or ea	rlier	as rec	quire	 L	
29	Clutch cable	I&A	I&A	I&A	I&A	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	
30	Accelarator cable	I&A	I&A	I&A	I&A	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	
31	Starter motor & Starter relay connections	I	Ι	Ι	I	I	I	I	I	I	I	Ι	
32	Brake Pad - Front	I	I	I	I	I	I	I	I	I	I	I	
33	Brake Shoe - Rear	I	I	I	I	I	I	I	I	I	I	Ι	
34	Rear Brake Cam	I	I	I	I	I	I	I	I	I	I	I	

I : Inspect (Clean, Adjust, Lubricate or Replace if necessary)

A : Adjust C : Clean L : Lubricate R : Reg I/A/R: Inspect/Adjust/Replace if necessary

ce if necessary)

R: Replace

Check

Check, Adjust & Lubricate frequently when riding in unusually wet, muddy, dusty roads and rainy season.

NOTE

For Maintenance after 50,000 kms, Please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

TOOLS & FIRST AID KIT

The tool kit is located in the left side Electrical box of the motorcycle.



S.N	o. Description	Qty.
1.	Tool bag	1
	Screw driver O6 X 160	1
3.	Tommy bar with Allen key	1
4.	Tubular spanner	1
5.	Tool Spark plug	1
6.	Double end spanner 10 X 12	2

A first aid kit is provided with the motorcyle for any emergency requirements. $\,$



S.No. Description	Qtv.
1. Antiseptic cream 5 gms	1
2. Wash proof plaster 1.9 cm x 7.2 cm	2
3. Gauze bandage 5 cm x 2 cm	1
4. Sterilized Gauze Swab 5 cm x 5 cm	2
5. Sterilized elastic plaster 7 cm x 6 cm	1
6. Elastic Gauze bandage 8 cm x 1 mtr.	1
7. First aid kit pouch	1

^{*} Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

WHEEL REMOVAL / ASSEMBLY

FRONT WHEEL REMOVAL

- Place the motorcycle on its center stand on a firm and flat surface.
- Provide a suitable support below the front end of the engine such that the front wheel is about 4 inches (10 cms) above the ground.
- Disconnect speedo cable.
- Loosen the pinch bolt on the right side fork end.
- Hold the axle on the right side and loosen the axle nut on the left side.
- Remove the axle nut and washer.
- Tap the axle out gently from the left side and remove completely from the right side





- Slide out the wheel from the fork legs along with the speedo drive, and spacer on the left side.
- Remove the speedo drive, small spacer on the right side and stepped spacer on the left side of the wheel hub.

CAUTION

Do not depress the front brake lever when wheel is removed as this will result in the brake pads coming too far out of the brake caliper.

Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid pads activation in the event the front brake lever is accidently depressed.

FRONT WHEEL REASSEMBLY

- Remove the wooden piece / card board sheet placed between the brake pads.
- Locate small spacer and speedo drive over the wheel hub on the right side.

WHEEL REMOVAL / ASSEMBLY


- Locate stepped spacer in the left side of the hub with its larger face outside.
- Locate front wheel between the fork ends duly ensuring the spacer and the speedo drive do not fall off and the brake disc is correctly positioned between the brake pads.
- Ensure the peg in the speedo drive is correctly positioned in the slot in the right side fork end.

Insert axle through the right side fork end and gently tap it in fully.

■ Locate washer and nut on the left side.



Hold the axle from the right side and tighten nut on left side to a torque of 7 KgM (70 Nm).









- Rotate the wheel and check for smooth rotation.
- Connect the speedo cable to speedo drive and check for proper working of speedo meter.
- Depress brake lever 2 or 3 times to check front brake efficiency.

WHEEL REMOVAL / ASSEMBLY

REAR WHEEL REMOVAL

- Place motorcycle on center stand on a firm and flat surface.
- Mark the position of the chain adjuster butting with the stopper on the Left side of the swing arm fork.





■ Tilt the motorcycle slightly to the right and pull out the rear wheel from the sprocket lugs.



REAR WHEEL REASSEMBLY

■ Ensure the 4 cush rubbers are seated properly in the rear wheel hub in their locations.

- Slide the wheel in position between the swing arms and locate the cush rubber in the sprocket lugs correctly such that the wheel is positioned straight
 - h y d
- Hold the wheel collar and spacer in place between the wheel hub and the left side swing arm fork and slide the wheel axle with the chain adjuster fully and firmly through the collar, spacer and rear wheel.
- Locate the chain adjuster in the marked position against the stopper in the swing arm.
- Hold the axle firmly from the left and tighten the nut fully on the axle on the right.

CAUTION

 Never hammer the wheel axle thro the spacer and rear wheel to prevent damage to its threads. Guide it into the wheel gently.

BRAKE FLUID

Check if oil is below 'MIN' level. To top Up, remove cover and diaphragm, then top up with DOT 4 as specified.



FRONT BRAKE

CAUTION

Brake fluid is highly corrosive and can cause damage to painted parts. Please ensure that brake fluid does not spill on any part of the motorcycle. In the event of a spill, please clean the area immediately with a soft cloth (preferably a wet cloth) to avoid damage.

To adjust the free play:

- Ensure the ground is level & firm and place the motorcycle in its centre stand
- Loosen rear wheel spindle nut.
- Loosen rear sprocket stub axle nut.
- Loosen lock nuts of the chain adjuster on both ends of the swing arm.
- Tighten / loosen the adjuster nut on right swing arm end, to reduce / increase free play.
- Rotate wheel slowly and check chain free play at the top run to be between 25 - 30 mm.



- Note the matching index marks on right swing arm and chain adjuster and tighten / loosen adjuster nut on left swing arm side, to ensure the marks on both sides are at the same position.
- Tighten the lock nuts against the adjuster nuts, taking care not to disturb the adjuster nut settings.
- Tighten rear sprocket stub axle nut and wheel spindle nut to a torque of 7 Kg-m.

WARNING

Chain slackness beyond 30mm will lead to chain slippage.


Maintain drive chain slackness within the specified limits at every $1000 \ \text{kms}$ interval.

Please Check the front and rear wheels are correctly aligned, after the chain adjustment.

BRAKE PAD WEAR

Brake pad wear depends upon the severity of usage, the type of riding and road condition.

FRONT BRAKE

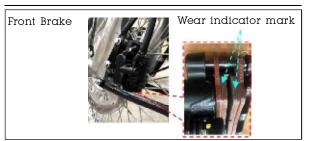

Check the wear indicator mark on each pad. if either pad is worn to the wear indicator mark. replace both pads as set. Visit royal enfield dealer for this service.

REAR BRAKE PEDAL HEIGHT

- Loosen the lock nut.
- Turn in or out the pedal stop pin till the brake pedal and front foot rest are in the same height as shown in fig.
- Tighten the lock nut.
- Check for free rotation of rear wheel.

REAR BRAKE

- Turn in or out the adjuster nut at the brake rod end.
- Recommended brake pedal free play is 20-30mm
- Check that the brake is not binding and the rear wheel rotates freely.







DRIVE CHAIN TENSION (Free Play 25-30mm)

- Loosen axle nut, spindle nut, anchor nut and brake rod nut.
- Turn the adjuster cams on both sides, till 25 to 30 mm slackness is achieved.



- Check and ensure that the number of notches from the punch mark on the cam to the notch resting on the pin are equal on both sides.
- Apply brake and tighten all nuts.

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer/Service Center.

CONTROL CABLES

Lubricate after water washing motorcycle or if used during rainy conditions.

HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply α few drops of oil on the pivots.

CENTER / SIDE STAND PIVOTS


Apply α few drops of oil on the pivots after cleaning the area of dirt.

DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

OIL LEVEL INSPECTION

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.



■ Top up only with recommended Engine oil

CAUTION


Use of wrong grade or spurious oil can seriously affect motorcycle performance & damage to moving parts.



SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Two spark plugs are provided in your motorcycle.
- Remove the spark plug cap from the spark plug.
- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.80 to 0.90 mm.



- Refit the spark plug on the cylinder head and refit the spark plug cap on the spark plug.
- Make sure the spark plug/Spark plug cap & HT cables are proper fitment.

INSPECTION OF TYRES AND WHEELS

 Inspect the tyres periodically for tread wear, cracks and cuts.

Minimum tr	ead depth :
Front tyre : 1mm	Rear tyre : 2 mm

- Check and remove stone, splinters, nails or other particles embedded in the tyre treads.
- Periodically inspect wheels for spokes breakage and wheel rim run out.
- Check proper seating of the tyre beading on the rim whenever the tyre is reassembled.
- Use only recommended tyres & tubes, inflated to correct air pressure.

	-	
	Front	Rear
Solo	1.41 kg/cm ² (20 PSI)	2.21 kg/cm ² (30 PSI)
With Pillion	1.55 kg/cm² (22 PSI)	2.20kg/cm ² (32 PSI)

BATTERY & MAINTENANCE

- The motorcycle is provided with 12V - 8 Ah MF (for Bullet 350-ES) and 12V - 5 Ah (for Bullet 350)
- Periodically check the Battery for
 Cleanliness and corrosion free terminals.
- For 12V 5Ah Batteries: Periodically check Electrolyte level in each cell and top up with distilled water if required.





REMOVAL OF BATTERY FROM THE MOTORCYCLE

- The battery is located on the left side of the motorcycle near the electrical box.
- Ensure motorcycle is parked on its centerstand, in a well ventilated area.



- Ensure the ignition switch and engine stop switch are in OFF position.
- Insert the key into the battery cover lock, turn anticlockwise and hold.
- Remove the battery cover outwards while releasing the cover from the lock peg on top.
- Disconnect the -VE Terminal first and then +VE terminal.
- Remove the rubber straps and take out the battery.





ASSEMBLY OF BATTERY ON MOTORCYCLE

- Locate the battery in the carrier.
- Secure the battery to the carrier with the rubber strap.
- Connect the +ve first and then -ve terminal to the respective cables and smear petroleum jelly on the terminals, and cover the terminals with the rubber sleeve provided on the respective cables.

- Position the battery cover over the lugs on top and close the cover.
- Turn the key anticlockwise and push the lock into the locator and turn the key clockwise such that the cover is locked in position.
- Release Key and remove from the lock.

CAUTION

Do not use battery with low charge as the battery internals will get damaged.

! WARNING

Always disconnect the negative (-) battery cable first and then the positive (+) cable while removing the battery connections. If the positive (+ve) battery cable should contact terminal with the negative (-ve) cable installed, the resulting sparks may cause a battery explosion which could result in serious injury.



MARNING

Battery terminals and internals contain lead and lead components, known to cause cancer and birth defects or other reproductive harm. Always wear approved protective face shield, rubberized gloves, and protective clothing when working with batteries. KEEP BATTERIES AND ACID OUT OF REACH OF CHILDREN.

NOTE

Usage of frequency for motorcycle is very important for battery to be in good performance condition. If the motorcycle is being used very rarely or sparingly and the terminals are not disconnected the battery is bound to lose its charge and result in a dead battery.

Battery 12V / 8 Ah (Bullet 350 - ES)

- Your Battery is a maintenance free type and can be permanently damaged if the cap strip is removed.
- It is not necessary to check the battery electrolyte level or add distilled water as the battery is a maintenance free (Sealed type).

For 12V 5Ah Batteries:

Do not overfill the battery electrolyte as it will spill out through the overflow pipe and cause corrosion to motorcycle parts.

CHANGING ELECTRICAL COMPONENTS

HEADLAMP BULB REPLACEMENT

Loosen the rim holding screw on top and take out the head light reflector.



- Disconnect the wiring coupler over the bulb.
- Remove the rubber grommet from the bulb.
- Press the clip by thumb to release the free end from bulb holder.
- Pull out the bulb.

ASSEMBLING THE HEAD LAMP BULB

- Refix the new halogen bulb into reflector unit of the headlamp.
- Gently press the bulb holding clip and lock the free end in its slot.
- 3. Fit the rubber grommet.
- 4. Connect the electrical connections carefully & assemble the headlamp in the reverse order of dismantling.







CAUTION

Never touch the bulb with your fingers, Finger prints will etch the glass and decrease bulb life. Always hold the bulb with paper or clean dry cloth during handling.



TAIL LAMP BULB

- Remove the tail lamp cover screws and cover.
- Press bulb gently and turn anticlockwise to pull out the bulb.
- Replace bulb and assemble in the reverse order.



TRAFFICATOR BULB

- Remove the screws & take out trafficator glass cover.
- Press bulb gently & Turn anticlockwise to take out the bulb.
- Position the new bulb inside holder, ensuring that the pins in the bulb, match with the slots in the holder.
- Gently press the bulb and turn clockwise to lock the bulb in the holder.
- Refit the trafficator glass and screws, ensuring the lens slot / cut mark is at the bottom.

NOTE

Make sure the Ignition switch is in OFF position when replacing the bulbs and Electrical parts.

FUSE


■ Open the left side Electrical box.



■ The blade fuses are located in the carrier and differently coloured for identification.



RELAY STARTER - FUSE BOX (BULLET 350 - ES)

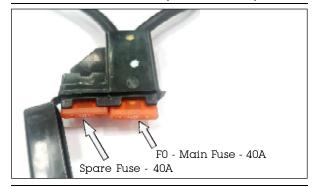

NOTE

HARNESS MAIN CABLE FUSE BOX (BULLET 350-ES)



NOTE

- Do not use a fuse different rating from that specified.
- Fuse SF4 (5A) provided separately in the Harness Add on fuse box.

BLADE FUSE USAGE LIST

Fuse ID	Description	Rating
Fl	MAIN FUSE	30A
F2	CHARGING FUSE	10A
F3	IGNITION TCI	10A
F4	SIGNALING FUSE	10A
F5	Lighting	5A
F6	HEAD LAMP	10A
F7	ABS MAIN 1	15A
F8	ABS MAIN 2	10A
F9	ABS ECU	5A
SF1	SPARE FUSE	10A
SF2	SPARE FUSE	15A
SF3	SPARE FUSE	30A
SF4	SPARE FUSE	5A


SPARE FUSE SF4 (BU 350 KS)



NOTE

■ Fuse SF4 (5A) provided separately in the Harness - Add on fuse box.

HARNESS MAIN CABLE FUSE BOX (BU 350 ES)

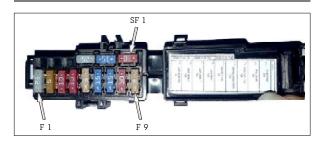

NOTE

Do not use a fuse different rating from that specified.

BLADE FUSE USAGE LIST

Fuse ID	Description	Rating
Fl	CHARGING FUSE	25A
F2	TAIL LAMP FUSE	5A
F3	IGNITION FUSE (TCI)	10A
F4	SIGNALLING FUSE	10A
F5	SPARE FUSE	5A
F6	LIGHTING FUSE	15A
F7	ABS MAIN 1	15A
F8	ABS MAIN 2	10A
F9	ABS IGNITION	5A
SF1	SPARE FUSE	10A
SF2	SPARE FUSE	15A
SF3	SPARE FUSE	25A

LONG TRIP PRECAUTIONS

Checks prior to the commencement of long journey

- Service the motorcycle at a Royal Enfield Authorised Dealer / Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

Checks after every 1500 kms of run

- Any loose fasteners.
- Condition of the tyres.
- Electrolyte level in the battery...
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

Items to be carried

- Tool kit
- First aid kit.
- Bulbs for headlight, trafficator light, rear tail lamp and Mini blade fuse (25, 15, 10, 5 Amps) -(Applicable for BU 350 KS Model)
- Bulbs for headlight, trafficator light, rear tail lamp and Mini blade fuse (30, 15, 10 & 5 Amps) -(Applicable for BU 350 ES Model)
- Accelerator, Clutch and Front brake cables.
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.
- Spare tubes.

WASHING PROCEDURE

PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, carburetor, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, speedometer, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, carburetor, spark plug, battery etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.
- Use luke warm water and mild detergent on the painted components to remove dirt, etc.
- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the obscure areas of the motorcycle, electrical connections etc.

- Once the motorcycle has been ridden in salty conditions or near coastal areas it is recommended to wash your motorcycle with cold water. Please do not use warm water for washing as it may damage the motorcycle due to chemical reaction with the salt. After washing process once the motorcycle is completely dry it is recommended to apply anti corrosion spray on all the metal and chrome plated areas to protect the parts from corrosion.
- It is recommended not to apply the anti-corrosion spray on the brake discs.

AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivot and rear chain with lube oil
- Polish the painted and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake shoes.

STORAGE PRECAUTIONS

Incase your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle service through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank, fuel line and carburetor.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lub oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.
- If the motorcycle is not used for a month or longer, It is advised to disconnect battery terminals and

- remove the battery. Before refitting the battery in the motorcycle, check the battery voltage is within specification, if not, recharge it from authorized service workshop / battery dealer.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Maintain electrolyte level between "max" or "min" mark, by adding distilled water and wipe the battery dry (Only for 12V 5Ah batteries).
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free of moisture and dust.
- For re-use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer/Service Center to rectify the problem and to ensure trouble free performance.

Symptom	Observations	Check for / Remedy
	1. Ignition/Engine stop switch is in "OFF" position	Switch "ON" Ignition / Engine stop switch
To other Dance	2. Very low / No fuel in the fuel tank.	Turn fuel tap to reserve position / Fill Fuel
Engine Does not start	3. Lights / horn very dim	Weak/Discharged battery. Replace Battery
	4. Electricals not working	1. Battery completely dead. Replace battery
		2. Fuse Blown. Replace appropriate fuse.
		Note: If fuse blows again, contact Authorised Service Center.
	5. Engine Cranking but not starting	Spark plug Cap/wire disconnected. Reconnect.
Engine Starts BUT shuts off	Engine shuts off as soon as throttle is closed.	Idling RPM setting in Carburetor is disturbed. Reset the Idling RPM screw in Carburetor.
immediately		Carburetor Flooded. Shut off fuel tap, gently tap
		Carburetor bottom and reopen fuel tap. Check if flooding has stopped.

TROUBLE SHOOTING

Symptom	Observations	Check for / Remedy
Engine Misfires & Runs Erratically/	l . Typically happens after a Refill / Adulterated / Water in Fuel	Drain out entire fuel and Refill with fresh fuel from a reputed filling station.
Stops	2. Motorcycle driven in Low gear / High RPM / Crowded places for long time.	Excessive Engine temperature. Switch OFF Engine and allow to cool down.
Poor Pickup	Engine RPM raises improportionately to motorcycle speed	having any free play.
	Rear Chain excessively loose causing chain to slip on Sprocket.	Adjust Rear chain to correct tension.
ABS (Anti lock Braking system)	ABS lamp continuously ON.	Take the vehicle to service center for diagnosis.

WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

- 1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 2 years / 30,000 kms from the date of sale, whichever is earlier.
- 2. In order to avail warranty benefits by second or subsequent owner, the second/subsequent owner should inform the nearest Royal Enfield Service Center about the purchase of the bike and shall fill in the requisite details in the form as requested by Royal Enfield.
- 3. The warranty shall be applicable only if all the 4 free services & 5 paid services are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
- 4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
- 5. Cost of oil, oil filter and fuel are chargeable to the customer.

WARRANTY TERMS & CONDITIONS

- 6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in preferring such claims on the respective manufacturer.
- 7. Warranty shall not apply to:
 - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.
 - (b) Components like fuel filter, oil filter, Air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, Steering ball races, Electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
 - (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
 - (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
 - (e) Parts damaged due to accidents, collision, abuse etc.
 - (f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, discoloration of exhaust bent pipe/silencer/soft or hard shockabsorber etc.
 - (g) Defects arising from fitment of unauthorised or additional electrical loads.

WARRANTY TERMS & CONDITIONS

- (h) Motorcycle serviced or repaired at unauthorised service centers.
- (i) Motorcycle used for competitions / racing / Stage Rallying etc.
- (j) Electrical component like bulbs, fuses etc. and electronic components failure including ECU due to repairs by arc welding.
- (k) Motorcycle found with tampering / drilling / welding mark on any part of the Frame.
- (l) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
- (m) Oxidization of buffed/painted/powder coated items etc.
- 8. RE reserves the right to finally decide on all warranty claims.
- 9. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

EMISSION WARRANTY

In compliance with the provisions of Rule 115(2) of the Central Motor Motorcycle Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warranty that if on examination by its Authorised Dealer / Service Center, the motorcycle fail to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Enfield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the part/s is/are not established, Royal Enfield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs. Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

EMISSION WARRANTY

Royal Enfield will not be responsible for any penalties that may be charged by statuatory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest RE Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Vehicles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle is specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

THE EMISSION WARRANTY SHALL NOT APPLY IF

- A valid "Pollution under control" certificate is not produced.
- The motorcycle is not serviced by RE Authorised Dealer/Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.

EMISSION WARRANTY

- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and railies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through and authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the owner's manual.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

The following warranty applies to the evaporative emission control system.

Royal Enfield Motors warrants the first owner and each subsequent owner, that this motorcycle is designed and built so as to conform, at the time of sale, with applicable regulations specified by the evaporative emission control system related parts fitted to this motorcycle are free from defects in materials and workmanship which may cause this motorcycle not to meet applicable regulations period of 24 Months from the date of first use of the motorcycle.

The Warranty period shall begin either on the date the motorcycle is delivered to the first retail purchaser OR from the first date the motorcycle is used as a demonstrator OR as a display and/or trial motorcycle.

THE FOLLOWING ARE NOT COVERED BY THE EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY:

- 1. Failures which may arise as a result of misuse, alterations, accidents OR non performance of routine maintenance, as specified in the Owner's Manual.
- 2. Replacing OR removing OR modifying any portion of the EVAPORATIVE EMISSION CONTROL SYSTEM (consisting of Fuel tank, fuel tank cap, Canister, purge valve, throttle body, vapor hoses, fuel hoses and hose connectors) with parts not certified to be genuine.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

- 3. Loss of time, inconvenience, loss of motorcycle use or any other consequential loss or damages.
- Any motorcycle in which the Odometer has been tampered with, OR the Speedo cable has been disconnected
 for any reason OR is broken and not replaced immediately, due to which the exact distance covered cannot
 be determined.
- 5. Normal ageing of parts such as fuel hoses, vapor hoses, gaskets & rubber components.

RECOMMENDATIONS FOR REQUIRED MAINTENANCE:

IT IS RECOMMENDED THAT THE ROUTINE MAINTENANCE OF THE MOTORCYCLE BE CARRIED OUT AT SPECIFIED INTERVALS AND ANY MAINTENANCE TO THE EVAPORATIVE EMISSION CONTROL SYSTEMS SHOULD BE PERFORMED ONLY BY AN AUTHORISED ROYAL ENFIELD SERVICE DEALER AND USING ONLY GENUINE ROYAL ENFIELD SPARE PARTS.

ENVIRONMENT CARE

BE AN ENVIRONMENTALLY CONSCIOUS RIDER

Swachh Bharat is Sachh Bharat. Being a Royal Enfield rider help the nation and the future generation for a cleaner environment.

Engine oil, oil filter, petrol, Battery, tyres, tubes, electrical & electronic parts replaced on your vehicle are to be disposed off in a proper way without polluting the environment. When your vehicle is attended in a Royal Enfield workshop our dealers do take care of that aspect. If you are getting it attended elsewhere please ensure that items are segregated and kept in a suitable container or bag without allowing them to get into soil, water or sewerage line, drains, water bodies like lake, canal, river. Sea etc. We strongly recommend that they are disposed off, in accordance to the applicable law, through Pollution Control Board approved agencies in the locality.

ENVIRONMENT CARE

CLEANING OR WASHING YOUR ROYAL ENFIELD

Please ensure that the effluents are not discharged into the environment. Please promote dry washing which helps the nation to conserve water too.

This note does not constitute legal advice; please contact your local authorities or your nearest Royal Enfield Service Centre for further guidance.

SERVICE COUPONS

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services & 5 paid services at specific intervals.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

1ST FREE SERVICE

lst Free Service

500 Kms
or
45±8 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

500 KMS or 45+8 DAYS WHICHEVER IS EAR	LIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
Sold by (Dealer's Name & Address)	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

1ST FREE SERVICE ACTIVITIES

	Water wash the motorcycle and dry it with a clean cloth		
2 Battery Ele	ectrolyte	Check level & top-up, if necessary	
3 Battery te	rminals	Clean and apply petroleum jelly	
	e chain free play	Check, clean, lubricate & adjust	
5 Rear bral	ke pedal pivot	Lubricate	
6 Rear bral	Ke .	Adjust play	
7 Front bral	Ke .	Check & top up brake fluid level	
8 Wheel rin	ns front & rear	Check spokes tightness / run out	
9 Front fork		Inspect for oil leakage	
10 Air filter el	ement	Clean	
ll Spark plu	gs (2 Nos.)	Check, clean & adjust gap	
12 H.T. Lead	S	Inspect for cracks	
13 Carbureto	or	Clean, Inspect & tune	
14 Fuel pipe		Inspect for cracks	
15 Rubberh	ose, Air filter to carburetor	Inspect for cracks	
16 Rubberh	ose, inlet manifold	Inspect for cracks	
17 Rubber h	ose, Evaporative Emission Equipment	Inspect for Cracks	
18 Accelerat	or, Carburetor / TPS cable	Check & Adjust play	
19 Clutch co	ble / Lever free play	Adjust play	
20 Engine oi	l sump strainer, magnetic drain plug	Clean	
21 Engine of		Replace	
22 Engine oil		Replace	
	sed at strainer & oil filter element		
	asher used at magnetic drain plug,		
	chamber drain screw		
	ers & kick starter pivot	Lubricate	
24 Pivot-Side	stand, Center stand, Pillion Foot Rest	Lubricate	

	CUSTOMER COPY				
	Job Card No:				
	Date:				
1	Odo Reading :				
İ					
İ	Name of Dealer/				
ı	ASC with Code:				
	ASC / Dealer's				
ı	Stamp & Signature				

2ND FREE SERVICE

2nd Free Service

5000 Kms
or
6 Months
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

5000 KMS or 6 MONTHS WHICHEVER IS EAR	RLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
Sold by (Dealer's Name & Address)	Address)
Received the above motorcycle after the service having	been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

2ND FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Batery Electrolyte Check level & top-up if necessary 3 Battery terminals Clean and apply petroleum jelly 4 Rear Drive chain free play Check, clean, lubricate & adjust 5 Rear brake pedal pivot Lubricate Rear brake Adjust play Check & top up brake fluid level Front brake Tyre front & rear Check wear pattern Inspect for oil leakage 9 Front fork 10 Air filter element Clean 11 Spark plugs (2 Nos.) Check, clean & adjust gap 12 H.T. Leads Inspect for cracks 13 Carburetor Clean, Inspect & tune 14 Fuel pipe Inspect for cracks 15 Rubber hose. Air filter to carburetor Inspect for cracks 16 Rubberhose, inlet manifold Inspect for cracks 17 Rubber hose, Evaporative Emission Equipment Inspect for Cracks 18 Accelerator, Carburetor / TPS cable Check & adjust play 19 Clutch cable / Lever free play Adjust play 20 Steering free play Check & Adjust 21 Engine oil Check level & top-up 22 Hand levers & kick starter pivot Lubricate 23 Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate

	CUSTOMER COPY
	Job Card No:
	Date:
	Odo Reading :
l	
İ	Name of Dealer/
	ASC with Code:
1	
	ASC / Dealer's
ı	\Stamp&Signature/

3RD FREE SERVICE

3rd Free Service 10000 Kms

10000 Kms
or
1 Year
whichever is
earlier from the
date of sale
Enter the Details in

Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

10000 KMS or 1 YEAR WHICHEVER IS EARL	IER FROM DATE OF SALE
Customer Name :	Dealer Code:
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
i	
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

3RD FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Batery Electrolyte Battery terminals Check level & top-up if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Rear Drive chain free play Rear brake pedal pivot Cam clean, lubricate & Adjust play Rear brake cam Rear brake Adjust play Adjust play
Check & top up brake fluid level
Check spokes tightness/run out
Check wear pattern
Replace
Check, clean & adjust gap Front brake
Wheel rims front & rear
Tyres front & rear
Air filter element 8 9 10 11 12 13 14 15 16 17 18 Arrillier element
Spark plugs (2 Nos.)
H.T. Leads
Carburetor
Fuel pipe
Rubber hose, Air filter to carburetor Inspect for cracks
Clean, Inspect & tune
Inspect for cracks
Inspect for cracks Rubber hose, inlet manifold Inspect for cracks Rubber hose, Evaporative Emission Equipment Inspect for Cracks Check & Adjust play Accelerator, Carburetor/TPS cable
Clutch cable/Lever free play
Engine oil sump strainer, magnetic drain plug Adjust play Clean Engineoil Replace Engine oil filter element Replace O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw Hånd levers & kick starter pivot Lubricate Front fork Swing arm spacer & pivot bush Inspect for oil leakage Lubricate Check, Lub. Steering balls & Adj. Play Steering system
Pivot-Side stand, Center stand, Pillion Foot Rest

CUSTOMER COPY Job Card No: Date: Odo Reading:
Odo Reading:
Odo Reading:
11
Name of Dealer/
ASC with Code:
ASC / Dealer's Stamp & Signature

4TH FREE SERVICE

4th Free Service

15000 Kms
or
1½ Years
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

15000 KMS or 11/2 YEARS WHICHEVER IS EAR	LIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
Sold by (Dealer's Name & Address)	Address)
Received the above motorcycle after the service having	been done to my entire satisfaction
Customer's Signature:	ate:
Contact Phone / Mobile No.:	

4TH FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Batery Electrolyte	Check level & top-up if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot	Lubricate
6	Rear brake	Adjust play
7	Front brake	Check & top up brake fluid level
8	Front fork oil	Inspect
9	Air filter element	Clean
10	Spark plugs	Replace
11	H.T. Leads	Inspect for cracks
12	Carburetor	Clean, Inspect & tune
13	Fuel pipe	Replace
14	Rubber hose, Air filter to carburetor	Inspect for cracks
15	Rubber hose, inlet manifold	Inspect for cracks
16	Rubber hose, Evaporative Emission Equipment	Inspect for Cracks
17	Accelerator, Carburetor / TPS cable	Check & adjust play
18	Clutch cable / Lever free play	Adjust play
19	Engine oil	Check level & top-up
20	Hand levers & kick starter pivot	Lubricate
21	Steering free play	Check & Adjust
22	Tyres front & rear	Check wear pattern
23	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

CUSTOMER COPY
Job Card No:
Date:
0.1 P 11
Odo Reading :
Name of Dealer/
ASC with Code:
ASC / Dealer's
Stamp & Sianature

5TH PAID SERVICE

5th Paid Service

20,000 Kms
or
2 Years
whichever is
earlier from the
date of sale


Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

20,000 KMS or 2 YEARS WHICHEVER IS EARI	LIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading :	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	been done to my entire satisfaction
Customer's Signature:	rate:
Contact Phone / Mobile No.:	

5TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
/ 2		Check level & top-up, if necessary
3		Clean and apply petroleum jelly
4		Check, clean, lubricate & adjust
5		Lubricate
6		Cam clean, lubricate & Adjust play
7		Inspect & replace
8	Rear brake	Adjust play
9		Check & top up brake fluid level
1	D Tyres front & rear	Check wear pattern
1	l Air filter element	Replace
1	2 Spark plugs (2 Nos.)	Check, clean & adjust gap
		Inspect for cracks
		Clean, Inspect & tune
		Inspect for crack
		Inspect
		Inspect
		Inspect
		Check & Adjust play
		Check & Adjust play
		Clean
		Replace
2		Replace
	O-Rings used at strainer & oil filter element	
	Copper washer used at magnetic drain plug,	
	Flywheel chamber drain screw	
		Lubricate
		Replace
		Lubricate
		Check, Lub.Steering races, balls & Adj. Play
		Check by compression test
		Inspect
		Lubricate
(3	l Wheel rims front & rear	Check spokes tightness / run out

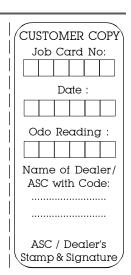

6TH PAID SERVICE

6th Paid Service

25,000 Kms
or
2½ Years
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

25,000 KMS or 2½ YEARS WHICHEVER IS EAR	RLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
Sold by (Dealer's Name & Address)	Address)
Received the above motorcycle after the service having	been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

6TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth 2 Batery Electrolyte Check level & top-up if necessary 3 Battery terminals Clean and apply petroleum jelly 4 Rear Drive chain free play Check, clean, lubricate & adjust 5 Rear brake pedal pivot Lubricate 6 Rear brake Adjust play Check & top up brake fluid level Front brake Check wear pattern 8 Tyres front & rear 9 Air filter element Clean 10 Spark plugs Check, clean & adjust gap Inspect for cracks 11 H.T. Leads 12 Carburetor Clean, Inspect & tune 13 Fuel pipe Inspect for cracks 14 Rubber hose, Air filter to carburetor Inspect for cracks 15 Rubber hose, inlet manifold Inspect for cracks 16 Rubber hose, Evaporative Emission Equipment Inspect for Cracks 17 Accelerator, Carburetor / TPS cable Check & adjust play 18 Clutch cable / Lever free play Adjust play 19 Engine oil Check level & top-up 20 Hand levers & kick starter pivot Lubricate 21 Front fork Inspect for oil leakage 22 Steering free play Check & Adjust 23 Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate

 	CUSTOMER COPY Job Card No:
İ	Job Cara No.
1	
	Date :
	Odo Reading :
	Name of Dealer/
	ASC with Code:
l I	
	ASC / Dealer's
ı	\Stamp&Signature/

7TH PAID SERVICE

7th Paid Service

30,000 Kms
or
3 Years
whichever is
earlier from the
date of sale


Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

	30,000 KMS or 3 YEARS WHICHEVER IS EARL	LIER FROM DATE OF SALE
	Customer Name :	Dealer Code :
	Address:	
	Frame No:	Regn. No:
	Engine No:	Sale Date:
	Motorcycle Installation Form No.	Serviced Date:
 	ODO Reading:	Serviced by (Dealer's/ASC Name &
	Sold by (Dealer's Name & Address)	Address)
i		
	Received the above motorcycle after the service having	been done to my entire satisfaction
	Customer's Signature:	ate:
	Contact Phone / Mobile No.:	

7TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Batery Electrolyte	Check level & top-up if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot	Lubricate
6	Rear brake cam	Cam clean, lubricate & Adjust play
7	Rear brake	Adjust play
	Front brake	Check & top up brake fluid level
	Tyres front & rear	Check wear pattern
10	Air filter element	Replace
	Spark plugs	Replace
	H.T. Leads	Inspect for cracks
		Clean, Inspect & tune
		Inspect
		Inspect for cracks
		Inspect for cracks
		Inspect for cracks
		Check & adjust play
		Adjust play
		Clean
		Replace
22		Replace
		Lubricate
		Check & replace fork oil
		Lubricate
		Check, Lub. Steering balls & Adj. Play
		Lubricate
28	Wheel rims front & rear	Check spokes tightness / run out
	6 7 8 9 10 11 12 13 14 15 16 17 18	2 Batery Electrolyte 3 Battery terminals 4 Rear Drive chain free play 5 Rear brake pedal pivot 6 Rear brake pedal pivot 7 Rear brake 8 Front brake 9 Tyres front & rear 10 Air filter element 11 Spark plugs 14 T. Leads 13 Carburetor 14 Fuel pipe 15 Rubber hose, Air filter to carburetor 16 Rubber hose, hiel manifold 17 Rubber hose, brapparative Emission Equipment 18 Accelerator, Carburetor / TPS cable 19 Clutch cable / Lever free play 10 Engine oil sump strainer, magnetic drain plug 10 Engine oil filter element 10 O-Rings used at strainer & oil filter element 11 Copper washer used at magnetic drain plug 12 Engine dil evers & kick starter pivot 13 Hand levers & kick starter pivot 14 Front fork 15 Swing arm spacer & pivot bush 15 Steering Baill Races & Bails system 16 Pivot-Side stand, Center stand, Pillion Foot Rest

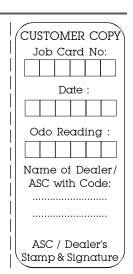

8TH PAID SERVICE

8th Paid Service

35,000 Kms
or
3½ Years
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

	35,000 KMS or 31/2 YEARS WHICHEVER IS EAR	RLIER FROM DATE OF SALE
ļ	Customer Name:	Dealer Code :
ļ	Address:	
	Frame No:	Regn. No:
l I	Engine No:	Sale Date:
l l	Motorcycle Installation Form No.	Serviced Date:
 	ODO Reading:	Serviced by (Dealer's/ASC Name &
 		Address)
! 		
İ		
! 	Received the above motorcycle after the service having	been done to my entire satisfaction
 	Customer's Signature:	rate:
	Contact Phone / Mobile No.:	

8TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Batery Electrolyte Check level & top-up if necessary Battery terminals
Rear Drive chain free play
Rear brake pedal pivot Clean and apply petroleum jelly Check, clean, lubricate & adjust Lubricate Rear brake cam Cam clean, lubricate & Adjust play Adjust play Rear brake Check & top up brake fluid level Check wear pattern Front brake Tyres front & rear 10 Air filter element Clean 11 Spark plugs (2 Nos.) 12 H.T. Leads Check, clean & adjust gap Inspect for cracks 13 Carburetor Clean, Inspect & tune Fuel pipe Check & Replace 15 Rubber hose, Air filter to carburetor Inspect for cracks 16 Rubber hose, inlet manifold 17 Rubber hose, Evaporative Emission Equipment Inspect for cracks Inspect for Cracks Accelerator, Carburetor / TPS cable Check & adjust play Clutch cable / Lever free play Adjust play 20 Engine oil sump strainer, magnetic drain plug 21 Engine oil Cléan Check level & top-up 22 Hand levers & kick starter pivot 23 Front fork Lubricate Check & replace fork oil Swing arm spacer & pivot bush Lubricate Check, Lub. Steering balls & Adj. Play 25 Steering Ball Races & Balls system Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate Wheel rims front & rear Check spokes tightness / run out

CUSTOMER COPY Job Card No: Date: Odo Reading:
Odo Reading:
Odo Reading:
11
Name of Dealer/
ASC with Code:
ASC / Dealer's Stamp & Signature

9TH PAID SERVICE

9th Paid Service

40,000 Kms
or
4 Years
whichever is
earlier from the
date of sale


Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

	40,000 KMS or 4 YEARS WHICHEVER IS EARL	LIER FROM DATE OF SALE
	Customer Name :	Dealer Code :
	Address:	
	Frame No:	Regn. No:
	Engine No:	Sale Date:
	Motorcycle Installation Form No.	Serviced Date:
 	ODO Reading:	Serviced by (Dealer's/ASC Name &
	Sold by (Dealer's Name & Address)	Address)
i		
i	Received the above motorcycle after the service having	been done to my entire satisfaction
	Customer's Signature:	ate:
' 	Contact Phone / Mobile No.:	

9TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Batery Electrolyte	Check level & top-up if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot	Lubricate
6	Rear brake cam	Cam clean, lubricate & Adjust play
7	Rear brake	Adjust play
8	Front brake	Check & top up brake fluid level
9	Tyres front & rear	Check wear pattern
10	Air filter element	Replace
11	Spark plugs (2 Nos.)	Check, clean & adjust gap
12	H.T. Leads	Inspect for cracks
13	Carburetor	Clean, Inspect & tune
14	Fuel pipe	Replace
15	Rubber hose, Air filter to carburetor	Replace
16	Rubber hose, inlet manifold	Replace
17	Rubber hose, Evaporative Emission Equipment	Replace
18	Accelerator, Carburetor / TPS cable	Check & adjust play
19	Clutch cable / Lever free play	Adjust play
20	Engine oil sump strainer, magnetic drain plug	Clean
21	Engine oil .	Replace
22	Engine oil filter element	Replace
	O-Rings used at strainer & oil filter element	
	Copper washer used at magnetic drain plug,	
	Flywheel chamber drain screw	
23	Hand levers & kick starter pivot	Lubricate
24	Front fork	Check & replace fork oil
25	Swing arm spacer & pivot bush	Lubricate
26	Steering Ball Races & Balls system	Check, Lub. Steering balls & Adj. Play
27	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
28	Wheel rims front & rear	Check spokes tightness / run out

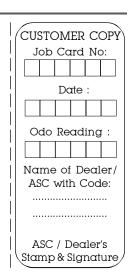

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

REGIONAL & AREA OFFICES

R1: Chandigarh, H.P, J&K, Punjab Royal Enfield SCO, No. 5, 1st Floor, Sector-11 , PANCHKULA (Haryana) Pin Code - 134 112.	R3: Uttarkhand & Uttar Pradesh Royal Enfield UGF 15-19, Landmark Arcade, 2 Badshah Nagar Crossing, Faizabad Road, LUCKNOW – 226 006.	RG: Orissa & West Bengal Royal Enfield Shrachi Tower, 3rd Floor, 686 Anandapur, KOLKATA - 700 707.	R8: Goa & Maharashtra Royal Enfield Plot No.16, Sector -1, Sion Panwel Highway, Nerul, NAVI MUMBAI - 400 706.	R10: Karnataka Royal Enfield Door No. 2067/1, 2068/2, East End "A" Main 9th Block, Jayanagar, BANGALORE - 560 069.
Tel: 0172-5011255, 5011251 R2: Delhi, Haryana, NCR & Rajasthan Royal Enfield C/o EICHER ENGG.COMPONENTS Plot No. 7, HSIDC Industrial Area, Sector 18, Palam Gurgaon Road,	Tel: 0522-6566675 Fax: 4005973 R4: Gujarat & Madhya Pradesh Royal Enfield 103, Safal Prelude, Opp. Parsavanath Esquire Cross Road, Corporate Road, Prahlad Nagar, Off. S.G. Highway,	Tel: 033-40060206 / 0209 Royal Enfield A Unit of Eicher Motors Ltd. 407, 4th Floor, Nirmala Plaza, Forest Park, BHUBANESWAR - 751 009. Tel: 0674-6540206	Tel: 022-27700395, 27700501 Royal Enfield 203, 204 Sneha Ganga, Near Vega Centre, Shankar Seth Road, Swargate, PUNE - 411 037. Tel: 020-40028090 Fax: 24447174	Tel: 080-22440588, 41753277, 41536488 R11: Tamilnadu & Andaman Royal Enfield Plot No. 350 to 354, 2nd Floor, 4th Link Street, Nehru Nagar Industrial Area, Kottivakkam, (OMR-IT Highway),
GURGAON (Haryana) - 122 015. Tel: 0124-4278138, 4278139 Fax: 4382148 Royal Enfield G-5, 6, 7, Gitanjali Towers, Ajmer Road, JAIPUR - 302 006. Tel: 0141-4106747, 4034748 Fax: 0141-4106748	AHMEDABAD - 380 015. Tel: 098-25113168 Fax: 079-40024461 R5: Bihar, Chattisgarh & Jharkhand Royal Enfield 3rd Floor, Maple Plaza, Gate No. 2 , Ashok Nagar, RANCHI (Jharkhand) - 834 002. Tel: 0651-2245262	R7: Arunachal Pradesh, Assam Manipur, Meghalaya, Mizoram, Nagaland & Tirupura Royal Enfield Astha Plaza, 4th Floor (M4-2), G S Road, Opposite Deorah College, Ulubari, GUWAHATI - 781 00 . Mob: +91 8135846461	R9:A.P. & Telangana Royal Enfield (A Unit of Eicher Motors Ltd) No: 8-3-166/B to F, Erragadda Main Road, Beside Gokul Theatre, Erragadda, HYDERABAD - 500 018. Tel: 7093190003	(CHENNAI - 600 096. Tel:044-42070661, 24540828 R12: Kerala & Lakshadweep Royal Enfield 25/85A, Opp. to IOC Pump, Koonamthai, Edappally Post, KOCHI - 682 024. Tel: 0484-6494990, 6494991 Fax: 2543616

ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH
Anantapur-Rudram pet By - Pass THUMP & THREADS AUTOMOTIVES	Cuddapah-Mydukur Road Garisa Automotives +91 7661848444 East Godavari -	Guntur - NGO Colony Anu Auto Agency +91 9100774714 086472-21787	Krishna - Gandhi nagar Tapasya Motors +91 9908503833; +91 9154166664	Nellore - KS Reddy Shopping Complex Rishi Motors +91 8977727798; 9502802244, 8977714477
+91 7013781892; 9100403966 Chittoor - Opposite Indian Oil Petrol Pump Sri Sai Motors	Edarapalli Road Shri Jayalakshmi Automobiles +91 7396534114; 9247089555	Guntur-Opp Pemmasani Theratre Shakthi Motors +91 8333021555; 8644221555, 08644-223555	Kurnool - Behind RTC Bus Stand Sandhya Automotives +91 7799159977; 9381896143; 9904039868	Pamarru Road TAPASYA MOTORS +91 6302646969 +91 6302660867 Power Pet- West
+91 9100622208; 8571230244 Chittoor-Renigunta Road	Gudur - Beside Eenadu Office Rishi Motors +91 8977714477;	Kadappa - Chinna Chowk Anjana Bikes +91 9010389998;	Kurnool - Opp Harsha Hospital Dheeru Motors	Godavari Classic Automotive +91 8897045812 +91 8812234582
Sri Sai Motors +91 9100644419; 9100644418	8978179977; 8977727799 Guntur-Auto Nagar Jubilant Avenues Pvt.Ltd	+91 7095388955 Kakinada - Jagannayakpur	+91 9133065553 +91 9553006239	Prakasam-Kotla Bazaar Lekhana Automotives +91 8885002113 +91 8886331777
Chittoor-Tirupathi Road Sri Sai Motors +91 9100622205 +91 8572245057	+91 8143008506; 8507 Guntur- Ring Road Jubilant Avenues Pvt.Ltd +91 8886669815	Shri Jayalakshmi Automobiles +91 9505826795; +91 7416443555	Kurnool-Revenue Ward-I Sandhya Automotives +91 8512231777 +91 9381920250	Prakasam - NH 5 Lekhana Automotives +91 8885002113 8885002114; 8885002113

ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH
Prakasam - South Bypass Road Lekhana Automotives +91 8885009199 +91 8885002114	Tadipatri - Anantapur Dheeru Motors +91 7995551299 +91 7993358681 Tanuku - Undi Road Varma Automotives	Vijayawada - Star Complex - Auto Nagar Pravallika Motors +91 9030699555 +91 7207559555	Vishakhapatnam - HB Colony Road Royal Enfield Company Stores +91 8143606073	West Godavari -NH 16 Varma Automotives +91 8367781116 +91 8367781119 West Godavari - Aswarao
Rajamahendravaram- Stadium Road Sri Ram Automobiles +91 9246665513 +91 8832474844	+91 7095812666 +91 7095812888 Vijayawada - Beside Swarna Hotel Pravallika Motors +91 9030699555	Vishakapatnam - Anakapalli Road Singam Automobiles +91 9110341281 +91 9640355304 Vishakhapatnam -	0891-2768887; 2768886 Visakhapatnam - Opposite Visakha Dairy Singam Automobiles +91 8897333875 +91 8924225563	Peta Road Classic Automotive +91 8464946622; 8821223332, 08812-234582 ARUNACHAL PRADESH
Srikakulam-Kasibugga Circle Lakshmi Automobiles +91 8985723344 +91 8985823344 Srikakulam-Palasa Lakshmi Automobiles +91 9032664497; 8121929235	+91 9121949555 Vijayawada - Mosque Street Mahalakshmi Motors +91 8886422559 Vijayawada- Mylurai Centre Mahalakshmi Motors +91 9581922559 +91 6303424323	Gajuwaka Cidanta Motors +91 8912576007 0891-6502008 Vishakhapatnam - Marripallem Saran Motors +91 8885947222 +91 8885847222	Vishakhapatnam - Tuni Sri Ram Automobiles +91 9966738924 Vizianagaram- Aadharsh Nagar Layout Lakshmi Ganapathi Automobiles +91 7382323344; +91 9381468221	Naharlagun - Itanagar Bucho Royal Enfield +91 9774988350 0360-2350103 ASSAM Baihata Chariali-Kamrup S.S.Automobiles +91 9706610625 03621 286036

ASSAM	ASSAM	ASSAM	ASSAM	ASSAM
Barpeta - Near Manas	Dhubri - GTB Road	Kamrup - Opposite HP	Kokrajhar - Opposite	Ramnagar - Station Road
Gas Agency	Dynamic Motors	Petrol Pump	Indian Oil Petrol Pump	Dhemaji
GS Auto	+91 9707779334	Shahila Expositions Pvt Ltd	GS Riders	SANJOY ENTERPRISE
+91 9531232387	+91 8720917915	+91 9706077793;	+91 6900309152	+91 7002608708;
+91 8472987341	Duliaian-Kamalabari Road	9854043095; 9054023455	Nagaon -Khutikatia	7086188171
Bapujinagar.	FREE RIDE MOTORS	Kamrup - Sarusajai,	Bajrang Motors	Sivasagar -
Opp-Bharat Petroleum	+91 7002864702;	NH 37, Garalia	+91 9127021893;	B N Hazarika Road
Goalpara Riders INN	03742802589	SARAIGHAT RIDERS	8403057563; 9127021891	Funshine Getaways PVT. LTD.
+91 9706643717	Golaghat - GF Road	+91 7086064264	Nagaon - Karbi Anglong	+91 9127067178
Bongaigaon - Chapaguri	SINGH RIDE	+91 7086035995	Balaji Motor	+91 9127067190
Road	+91 7002414358	Karbi Anglong	+91 9127806618	Sonitpur - Opposite
SWASTIK AUTOMOBILES	+91 8472985037	Dimapur Road	Nalbari - Farida Manzil	Gotanga Nursery G.M Associate
+91 7086030374	Guwahati - Maligaon	Eshan Motors	Rouchand Automobile	
Darrang-Bhebarghat DARRANG RIDERS +91 8638172937	Chirag Enfield +91 8136051810 +91 7035125288	+91 7896169017 Kohima-North Hill	+91 9854532144; 9365531160	+91 8011105756 +91 9706471764
+91 9365202103	Jorhat - JPD Unit	Arcade	North Lakhimpur - N R L Petrol Depot	Sonitpur - Tezpur Road
Dibrugarh-Tekela Chiring	Achharsingh Royal	KK Motors	Rishi Riders	SUNMAH MOTORS PVT LTD
Rider's	+91 9707522666	+91 9077355332	+91 8721949969	+91 9127069444
+91 7636019684	+91 9207041076	+91 6909145859	+91 9954391219	+91 9127069251

ASSAM	BIHAR	BIHAR	BIHAR	BIHAR
Tinsukia - AT Road SD Royal +91 9101253415	Bhojpur - Near Bharat Petrolpump Om Wheels +91 8229803216	Gaya - Near Chandauti Crossing Kusum Motors +91 8271020543	Madhubani - Sahuwa Shagun Auto Sales +91 9123115406	Muzaffarpur-Zero Mile Kumar Automobiles +91 7283000386 +91 7280920950
BIHAR Araria - NH 57 YASHRAJ MOTORS +91 9470054154 +91 9431886577 Aurangabad - Near Over	+91 8229803217 Buxar - Near kaali mandir Shiv Prabha Automobiles +91 7360053453 +91 6204755537	Gopalganj - Next to M/S Highway Services	+91 9709052000 Mohania - Dist Kaimur Swastika Motors +91 9852336291 +91 8809564040	Nalanda - Opposite Pawapuri Petrol Pump PNN Automobiles +91 9809744666 +91 9709844666
Bridge Yodha Automobiles Pvt. Ltd +91 7283001748 +91 9199317474	Darbhanga-Mahant Nagar Surya Automobile +91 9472077777 +91 8877609999	1	Motihari - Chhota Bariyarpur Raj Motors +91 9471005185	Nawada-Kendua R.N. Automobiles +91 9728324339 +91 6201401146
Begusarai - KDM Estate Mayamanu Motors Pvt. Ltd +91 7280046824 Bhagalpur - Naya Bazar	Darbhanga-Samastipur Road SYV Motors +91 7739561277 East Champaran -		Muzaffarpur - Maripur Gautam Motors +91 7091592902	Patna-Patliputra Colony Ambey Motors +91 9102999131 +91 7366069330
Chowk Sri Ram Moto Corp +91 9472890189 +91 8986966553	Lakshmipur ACE MOTORS +91 9934291734 +91 7992268617	Complex Chandra Darbaar Motors Private Limited +91 6476222010	+91 9102990034 Muzaffarpur-Manikpur Gautam Motors - UNIT-2 +91 7707014824	Patna-Saguna More Siddhi Vinayak Automobiles +91 8092981877 +91 8406001069

BIHAR	BIHAR	BIHAR	CHATTISGARH	CHATTISGARH
Patna - Zero Mile Sukhmani Motors Pvt. Ltd. +91 9709761441 +91 7360011212 Purnea - Beluri	Saran - Opposite M&M Two Wheelers Supriyam Automobiles +91 9128739999 +91 8873539999	West Champaran - Sant Kabir Road Mishra Automobiles +91 7280046824 +91 9934646988	Champa -Janjgir Neeraj Royal +91 8109299092 +91 9303617182 Dhamtari -Raipur	Neemuch Galaxy Motors +91 8889997360 +91 9644002077 Raigarh - Chhatamuda
Link Motors +91 9182034654 +91 8298911115	Rohtas - Dwarkapuri Vintage Auto Corp +91 8540858433 Siwan -Chhapra Road	CHANDIGARH Chandigarh - Sector 32 D Garg Autos	Dhamtari Highway Shri Ram Automobiles +91 7089025555 +91 7722233755	Priyanka motors +91 7389910835; 7389910836, 6261808631
Puraniganj - Munger Vidya Automobiles +91 6201940529 +91 9065746303	Sri R.L. Automobile Pvt. Ltd. +91 7482063886, 8969457386, 06154-247686	+91 9501569388; 8146360388 CHATTISGARH	Jagdalpur -Geedam Road Kambo Motors +91 7692850003	Raipur- G E Road Besant Motors +91 9993608000 +91 7714911800
Saharsa - Tiwari Tola 7 Hills Automobiles +91 8877080667 06478-227007	Sitamarhi -Dumra Road Nili Automobiles +91 9771459577 +91 7283007814 Vaishali-Opposite Jail Gate	Bhilai -Near Tata Motors AAN Automotive 0788 4032227 Bilaspur -Vyapar Vihar	+91 7782291025 Korba - T P Nagar Kailash Automobiles +91 9826709907 Narsinghpur- Itwara	Raipur- Lodhi Para Chowk Indian Motors 0771-4221500; 4221400
Samastipur-Mohanpur Road Aditya Motors +91 8406803305 +91 8406803325	Ambika Bhawani Automobiles +91 7280068837 +91 7280068838	main Road Blue Sapphire Motors +91 7752407778 07752-407778	Bazaar Kandeli Kailash Motors +91 9755218270 +91 7792233153	Raipur-Tatibandh 6th Gear +91 8109106666 0771-4070666

CHATTISGARH	GOA	GUJARAT	GUJARAT	GUJARAT
Rajnandgaon - Opposite Kakad Auto Shubh Auto +91 9144291000	North Goa - Khadpaband Gardens Saini Motors +91 8589051616 +91 8322974554	Ahmedabad - Naranpura Karnavati Bikes +91 9825061120; 9016442200; 9099031295 Ahmedabad - Naroda	Banaskantha - Maheshwari Colony Parklane Auto +91 9925001944; +91 9925001486	Gandhinagar - Near Vayu Sena Circle Aanal Auto Agency +91 8980001123;
Surguja - Near Central school Dev Automobiles +91 9826813417 +91 9644344437 GOA Goa - Bardez Royal Enfield Garage Cafe Goa +91 9823139488 +91 9370918155	South Goa - Sukhamani Enclave Saini Motors +91 7767006138 +91 8232740345 GUJARAT Ahmedabad- Akashat Complex Basement Karnavati Bikes Pvt Ltd. +91 9825061120;	Krishna Wheels +91 9925333446; 7574839084, 079- 29703055 Ahmedabad - Opp.Visat Petrol Pump Sarabhai Prowheels +91 9081800299; 7927502565 Ahmedabad- Prarthana Complex Sarabhai Motors +91 7926635101	Bharuch-Near Shital Circle Vraj Auto +91 9824125050 02642-226969 Bhavnagar - Vithalwadi Gujarat Auto Centre +91 8734925463; 8401438386, 0278-2512648 Bhavnagar - Paliyad Road Old Soul Motorcycles +91 9909077775;	8980011637; 7923262020 Gandhi Nagar - Near NC Desai Petrol Pump Aanal Auto Agency +91 8980021164; 8980021163; 8980021161 Godhra-Yogeshwar Complex Concord Auto +91 9512036277; 9512036271, 02672-265523
Goa - Panaji Auto Guides +91 9168611669 +91 9689578406	9016442200; 9099031961 Ahmedabad- Ghodasar Sarabhai Automotives +91 9737724400 079-25812531; 25812530	079 26635105 Anand - GIDC Royal Ridentity Pvt Ltd. +91 9898484500 02692-233788; 233022	+91 9099300013 Bhuj-Naredi Ratatlav Road PM Autolink +91 9925235279 02832 231279	Jamnagar-Gujarat New Chandra Motorcycle Agency +91 9824233499; 0288-2570500

GUJARAT	GUJARAT	GUJARAT	GUJARAT	GUJARAT
Junagadh - Rajkot Junagadh Highway Shree Aashapura Enterprise +91 7046008488 0285 2660111	Navsari - Near Satyasai Seva Trust School PSG Motors +91 9924755570; 7283859061; 9924755590 Porbandar - Birla Road	Rajkot-Opposite Sky Mall Dev Auto +91 9879888303; 9712345028; 9054265554 Sabarkantha-Aravalli RAJVEE MOTORS	Surat - Beside Chetanya Tower Munjani Motors +91 7436000300; 9979213356; 7436000400 Surat - Opposite Hotel	Surat-Surat Dhulia Highway, Tapi P.S.G Motors +91 9924755546; 7283859064; 9924755547 Surendranagar -
Junagadh -Near Veraval Bypass Junction Anjaney Motors +91 9512779994;	Kailash Motors +91 9726435355; 8980099990; 02862-243842 Rajkot - Kalawad Road	+91 7069340008; 7069033725; 7069340005 Sabarkantha-Beside	Golden PSG Motors +91 9924755549; +91 7283859063	Wadhwan Kothariya Road Old Soul Motorcycles +91 9909007000; +91 9099400013
0287 6249990 Kachchh-Near Rambaugh Hospital N.P. Auto Agencies +91 9426140290;	Dev Motors +91 8401799998 0281 - 2563077 Raikot - Near Gondhiya	ONGC Colony Old Gate Vraj Auto +91 9924192255; 02646233955	Surat- Bhatha Icchapur Road JSN Motors +91 8401600411 0261-2740023	Vadodara- Opposite Gada Circle Amba Motors +91 9510910991; 7984665845, 0265 - 2540991
9033040290; 9825724716 Mehsana Parklane Auto Pvt Ltd +91 9925004538; +91 9925001464	Estate Aditya Moto Gujarat Pvt. Ltd. +91 9099092728; 9099092595, 0281 - 2371077	Sabarkantha-Opposite Reliance petrol Pump Rajvee Auto +91 8238411177; 7069033724; 02772 228811	Surat - Sarthana Varacha Purav Automobiles +91 9979860916; 9925154965; 9979841547 0261 2453793	Vadodara - Old Padra Road RSA Automotives +91 9714677112 0265 2355040

GUJARAT	HARYANA	HARYANA	HARYANA	HARYANA
Vapi - Opp Baba Sitaram Temple Gate Royal Thumpers +91 9879565274; +91 8962010072 HARYANA	Dabwali Road- Sirsa Gulzar Motors Agencies +91 8814011148; +91 8708453044 Faridabad-Mathura Road Heighten Automotive Pyt Ltd	JHAJJAR JMD Automobiles +91 8199885579; +91 8199885568 Kaithal Road - Near HDFC Bank	Kurukshetra-Loharu Road Charkhi Dadri Motors +91 8708375326 Kurukshetra NEXGEN MOTORCYCLING +91 9254022259	Rewari Premium Automation Pvt Ltd +91 8689091000 01274-251000 Rohtak Badhwar & Co.
Ambala - Ambala Chandigarh Highway Royal Motors +91 9468476100; 0171 2544795 Ambala cantt- Rai Market	+91 9873305544 0129 4080046 Fatehabad SDB Automobiles +91 9728942227; 7988568181, 01667-221786	Raghav Automobiles +91 8199947003; +91 8199968050 Kaithal Road - Old By Pass Road	Mahendragarh - Nizampur Road Royal Jindal Auto Pvt Ltd +91 8901452000, 0128 2255355 Panipat - Grand Trunk Road	+91 8059880030; 8059880020, 01262-271131 Sirsa Gulzar Motor Agencies +91 9996789365 01666-221367; 230459
Royal Motors +91 9034210005 0171-4017100 Bhiwani Sheoran Automobiles +91 7056762216 01664-252216	Hissar Malik Automobiles +91 9996272888 1662-276103 Jind Gill Automobiles +91 7027002582; +91 9416830333	Raghav Automobiles +91 8199947003; +91 8199947002 Karnal Monga Motors +91 8222070788 0184 2261810	Monga Automobiles +91 9354140006 0180-4000393 Pehowa Nexgen Motorcycling +91 9254022290; 8901229656	Sonipat - Rohtak Road Heydaan Motors +91 9034444466 Sonipat Heydaan Motors +91 9728900200 0130-2233004

HARYANA	HIMACHAL PRADESH	HIMACHAL PRADESH	JAMMU & KASHMIR	JAMMU & KASHMIR
Tohana SDB AUTOMOBILES +91 9728942229; 0169 2220230	Hamirpur - Dugha Parkash Royal Automobiles +91 9988005308; 9418945283, 01972-258483	Shamlaich - Solan Tapan Industries +91 7807500272 01792-227990	Digiana Camp (ASP) Sumeet Motors +91 9622873835; 9419236396, 0191-2431058	Kathua Lovish Automobiles +91 9796810666; 9682506722; 8716030546
Yamuna Nagar Falcon Automobiles +91 9315431300 0173 2230333	Kangra Snowline Autos +91 9816075428; +91 8352803131	Solan - Shogi Tapan Industries +91 9650494609;	Doda R.A.Enfield Unit - II +91 7051536478; +91 7051536477	Kathua -Swankha More Lovish Motor +91 9796810666; +91 7298484840
HIMACHAL PRADESH Baddi Simran Automobiles +91 8999200016; +91 9816059877	Kullu-Behind Dps School Heaven On Earth Automobiles +91 9459778896; 7590965818, 9459300881	7807400172, 01792-227990 UNA-Lalsingi Sharma Automobiles +91 9888280660;	Jammu - Janipur road Reliance Motors +91 9797373185; 9622584099, 0191-2575251 Jammu-B Sainik colony	Leh(ASP) Venture Third Pole +91 9797470555; +91 9999227196
Chamba Champavati Autos +91 9988005308; 9821377307, 9736118001	Mandi Shivam Automobiles +91 9988005308; 9816130436; 9818176300	7807169205; 9418445554 09218-446755 JAMMU & KASHMIR	Xtream Motors +91 7006340294; +91 9070467459 Jammu-National	Srinagar CAFE BIKE INN +91 9149531027; +91 7780978887
Dharamshala Him Enfield +91 9816083838 +91 8894389090	Paonta Sahib - Sirmour R.S. Enterprises +91 9650494609; 9418932854, 01704-223687	Baramula ZMR Automobiles +91 7006952694; 7051532873; 2874	Highway-1A Mountbird Wheels +91 7051533407; +91 7780865347	Srinagar PCS Automobiles +91 9797470011; 7780999289, 0194-2472781

JAMMU & KASHMIR	JHARKHAND	JHARKHAND	JHARKHAND	KARNATAKA
Udhampur R A Enfield +91 9055505003; 9622608106, 01992-250008	Dumka - Bhagalpur Road Majestic Autobikes Pvt Ltd. +91 7282006633; +91 6434231002 Giridih -Whitty Bazar	Jamshedpur - East Singhbhum NDG Motors Pvt Ltd +91 8863996222; +91 6576578555	Ranchi - Kokar Sri Nivas Automobiles +91 7763801822; +91 6512542789 Ranchi-Near Hill tank.	Bangalore - Banaswadi CVS Motors +91 8637416781; +91 7406440400
JHARKHAND Bokaro-ITI More G.R.Motors +91 8092043677	Shree Sanmati Enterprises +91 7283006015; +91 9534140200	Koderma - Near Hanuman Mandir Vinayak Bikes +91 8092542004;	West Circle Marvel Autobikes +91 9065519086; +91 6512547449	Bangalore - Banasankari H S R Services - RAJ +91 9739000350; +91 7829777916
Deoghar - Sarwan Road Roy Brothers +91 6202109344; +91 6202114640	Godda - Bhadhiya Kaushalya Motors +91 7360007885; +91 7360007886 Hazaribag - NH 33	+91 8092422001 Palamau - Ranchi Road Arjun Automobiles +91 7549092702 +91 7631774433	KARNATAKA Bagalkot - Mudhol Mudhol Motors +91 9980738900, +91 9980738900	Bangalore - BTM 2nd stage-Service Royal Enfield Company Store-Service
Dhanbad - Jharia Road Arti Automobiles +91 9031084004; +91 9031084003	Riders Point +91 9031005518 +91 8051666444 Jamshedpur - Bajrang	Ramgarh Anjaney Automobiles Pvt. Ltd. +91 9031000430	Bagalkot - Navanagar Bagalkot Motors +91 9673596344; +91 8453333181	+91 9916012313; 9343555583; 8040905108 Bangalore - B
Dhanbad - Kolakushma Thunder Motors Private Limited +91 7762053003	Nagar NH 33 Cruiser India +91 8210209301; +91 6205355710	Ranchi - Harmu Road Raghuram Autocare +91 9905110006; +91 9798211608	Bangalore Bommasandra Motors +91 8970392555; +91 8748982555	Narayanpura Sai Ram Autocraft +91 7022288663; 9108518827, 080-64909090

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Bangalore- Chunchaghatta Rd H.S.R. Services +91 7829777916; 7829000350; 9980762849,	Bangalore - Hebbala CVS Motors +91 9986755550; +91 9986755554 Bangalore - Kengeri	Bangalore - Nagarbhavi S.R Motors +91 9071340000, +91 9071713307 Bangalore - Nelamangala	Bangalore - Sankey Road CVS Motors +91 9886500042; +91 7406999080	Belgaum- Shivaji Circle Shri Munishwar Motors Pvt. Ltd. +91 9844633382; +91 7090112224
080-22133119	Accelerate Motors	Sri Sadguru Sai Motors +91 9164764222:	Bangalore-Sudhamanagar H S R Services SDN	Belgavi - Kolhapur Circle
Bangalore - Dasarahalli Sri Sadguru Sai Motors	+91 7022049623; +91 8028606969	+91 8151899998	+91 9108121314	Shri Munishwar Motors
+91 9164729444;	Bangalore-100 Feet Road	Bangalore - Raja Rajeshwari Nagar	080-22133119	Pvt. Ltd. +91 9036844398:
8151899998; 9066023999	Teknik Motors	Accelerate Motors	Bangalore (ASP) - HRBR	+91 8314213059
Bangalore - Electronic City-Singsandra	+91 9379446663; 8025284788; 7411011065	+91 7022049623 080-28606969	Layout Sri Manjunatha Bullet	Bellary - Dam Road
Electronic City Motors +91 7026613080;	Bangalore - Koramangala	Bangalore-Sadaramangala Village	Garage	Sanjeevini motors +91 8073899213:
7026613079, 8494942929	Koramangala Motors +91 8970872555;	Whitefield Motors +91 9606492011:	+91 9036111121; 8041614914; 9341220151	+91 7996955585
Bangalore - Hoskote	+91 7026604492	8028416464; 9108990863	Bangalore - Yelahanka	Bellary - Raghavendra
Main Road Teknik Motors +91 9535959343; 8029716641	Bangalore - Magdi road H.S.R. Services +91 8892016888 080-23156617	Bangalore-Sarjapur Road Teknik Motorcycles +91 8050784709; 8904000300; 8904000700	Acclaim Motors Pvt Ltd +91 9632881144; 9632881188, 9663550055	Colony Sanjeevini Motors +91 7795777677; 7353777768; 9591557149

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Bidar - Basavanagar Bhavani Motors +91 9535515649; +91 9019142142	Gadag - Hubli Road Gadag Motors +91 9513001495 Gulbarga - Near	Hubli - Kusugal Road - Keshwapur Klasik Motors +91 9738806151;	Kolar Jagadamba Automobiles +91 9066377086; +91 8152226629	Mangalore-Vishal Arcade Building Veenu Motors +91 9108487051; +91 9108487060
Chikkamangalore Chikkamangalore Motors +91 9591557149; +91 8262220236	Banashankari Hospital Mukunda Wheels Pvt. Ltd. +91 9663663189; +91 9945249305	7760735557, 0836-2288224 Hunsur-Mysore Aadith motors	Lingasur Road - Raichur Chukki Motors +91 8884314488;	Mysore (ASP) Kuvempu Nagar Abhyudhay Motor Services Pvt. Ltd.
Chitradurga Jilu Bikes +91 9886153148 +91 9148574111 Dakshina Kannada-	Hassan - Thanniruhalla Shree Subrahmanya Motors +91 9742217172; +91 8172256452	+91 9686182228; +91 7899000385 Karwar - Habbuwada Karwar Motors	+91 9742291418 Mandya - Karnataka Ind Estate Ruby Maratt Motorcycles	+91 9008881333 0821-2462066; 2462067 Mysore - Near Sayaji Rao Road
Behind Kallega Temple Frontline Automobiles +91 8884314488;	Hospet Road Sri Maruthi Auto Motors +91 8884314488;	+91 7625078394; +91 8382222321 Kodagu-Kushalnagar	+91 9108953401; +91 9739735552 Mangalore-Eyyadi Indust.	Abhyudhay Motor Services Pvt. Ltd. +91 9844260162; +91 9538841404
+91 8197685999 Davangere-Nittuvalli Road Royal Automobiles +91 8710096355; +91 8197426036	9148971805, 08384-226777 Hubli - Airport Road Salimath Engineers Services +91 8362232043; 9480296644, 0836-3241160	Abhyudhay Motor Services Pvt. Ltd. +91 8861289920; +91 9538841403	Estate Frontline Automobiles +91 8861006477; 8861006478, 0824-2211401	Mysore - Vijayanagar 1st Stage Aadith Motors +91 9686182228; +91 9686712221

KARNATAKA	KARNATAKA	KERALA	KERALA	KERALA
Raichur-Gangavathi Road Chukki Motors +91 8951430957; +91 9108471999	Tumkur - Kasaba Hobli Road Bhagavati Motors +91 9742273566;	Calicut - Kunnamangalam Blue Mountain Autos +91 7558909000; +91 7510999990	Ernakulam - Angamali Sanjo Motors +91 8592009992; +91 9809709999	Idukki - Vengallore Veliyathu Motors +91 8943200090; +91 8086097711
Ramnagar - Next to RBL Bank, Uttara Layout Ramnagar Motors	+91 7026401166 Udupi - Ambalpady, Moodanidamburu	Calicut - Mankavu Luha Automotives +91 7025105333;	Ernakulam - Nangelipady Sanjo Motors +91 860684999	Kanhangad-GVHSS Road- South junction
+91 9845852384; +91 8027271099 Shimoga - Shankar Mutt	Brahmi Motors +91 9164889161; 9164209161, 0820-2527590	+91 7025102888 Calicut - Puthiyagandi SS Motors	Ernakulam - Rajaji Junction Chittoor Road St. Mary's Motors +91 9961732888;	South West Motorcorp India Pvt Ltd +91 7594090909; +91 7593828222
Road Apollo Enterprises +91 9008138662;	KERALA Alleppey Rider's Motors	+91 9567863115 0495-2390770 Cochin - Edapally Royal Enfield Company	+91 9901/32886; +91 8891000691 Ernakulam - Thaikkattukara	Kannur - Chirakkal Vibrant Automotive
8182403456, +91 41187404 Sindagi - Solapur Chittudurga Highway	+91 8281057747 0477-2255030 Calicut - Francis Road	Store +91 7025233912	Sanjo Motors +91 7034939999; 0484-2630322	+91 8111990068; 8111990044; 8111990076 Kannur - Thottada
Rohan Motors +91 9986168363; +91 9513358363	Blue Mountain Autos +91 8286046565; +91 9895201667	Cochin - Vyttila Kaizen Motors +91 7559800073 0484-2307072; 4047072	iduki - Kottayam Road Veliyathu Motors +91 8086097709	SS Motors +91 8547670272 0497-2837666

KERALA	KERALA	KERALA	KERALA	KERALA
Kannur-Near Town Hall Circle Sharpline Automotive LLP +91 7511199944;	Kollam - Bishop Jerome Nagar Marikar (Motors) Ltd. +91 9947031120;	Kottayam - Mutholy Junction Javeens Motoring Pvt Ltd +91 9961839369;	Malappuram - Tanur Road ABC Motors +91 9447879400; 0494-2433277	Muvattupuzha- Vazhappilly Veliyathu Motors +91 8086097728;
+91 7511199944;	8590988442, 0474-2732474 Kollam- Kottappuram	0482-2206111 Kozhikode - Vadakara	Malappuram-Palathara Barak Enterprises LLP	+91 8086094444
Kasargod - Chemnad South West Motorcorp	Unnoonny Motors +91 9567966444;	Grace Motors +91 7034774444	+91 8606951026; +91 9061001188	Mele Pattambi-Palakkad Intrepid Works +91 8606933014
India Pvt Ltd +91 8594060606; +91 7593893914	+91 8606969009 Kollam - Madanada Unnoonny Motors +91 9567776142:	Kozhikode-NH 17, Kollam KMS AUTOMOTIVES +91 8943990660; 8943009009; 0496 - 2631009	Malappuram - Payyanangadi ABC Motors +91 9846148000	Methala-Thrissur Pinnacle Motor Works Pvt Ltd
Kayamkulam - Edasseril	8606969029, 0474-2764567	Kuriachira - Chiyyaram	0494-2422277	+91 9539882222; +91 9072575721
Junction Roverz Motors +91 9072584050; +91 9072584046	Kollam-Puthiyakavu Roverz Motors +91 9072633811; +91 9207722220	village Tags Bikez +91 7594953333; +91 7594959999	Malappuram - Valluvambaram ABC Motors +91 9447805300;	Ottapunna - Alappuzha Ramanattu Motor Corp +91 9072655300; 0478-2816555
Kollam - Chandanathope Unnoonny Motors +91 9567776146; 0474 2714787	Kottayam - Manapurath Building Javeens Motoring Pvt Ltd +91 9446397200; 0481-2566997	Malappuram - Kodathippadi Barak Enterprises LLP +91 7511188013; 6235241000	+91 9745407300 Mavelikkara - Karazhama Roverz Motors - MVK +91 7511184045; +91 7511115522	Palakkad - Marutha Road Intrepid Works +91 8606933001; +91 8606933008

KERALA	KERALA	KERALA	KERALA	KERALA
Palakkad - Second Mile Kallekad PVR Wheels +91 7902866672; +91 7902866669	Parempaadam - Thrissur Motorad Works +91 7510411220; +91 7902211600 Taliparamba-Chiravakku	Thrissur - Karunanakaran Nambiar Road Marikar (Motors) Ltd +91 8606863336 0487-2339307	Thiruvalla - Perumthuruthi St. Mary's Motors +91 9061519333; +91 9526260400 Thrissur-Puzhakal Padam Pinnacle Motor Works	Wayanad- Horizon Tower Tempest Automotive +91 8111999352; +91 8111999355 MADHYA PRADESH
Pathanamthitta - Santosh Junction Marikar Motors Ltd.	Nr National Highway Vibrant Automotive TPBA +91 8111995500;	Trivandrum-Near Reliance Petrol Pump Concept Bikes	Pvt. Ltd. +91 8594006006; +91 8111994010	Betul-Kalapatha Shree Sai Automobiles +91 8839021947;
+91 8606145007 0468-2223412	+91 8111993300, +91 8111991131 Thrissur - Anjur	+91 9048990150; +91 9048990646	Trivandrum - Tanvila Marikar (Motors) Ltd +91 8590988445	7141232451 Bhopal - Main Railway Station Road
Peringanad - Pathanamthitta Yamuna Agencies +91 9072623503;	Pinnacle Motor Works Pvt Ltd +91 8111995132; 0487-2975188	Trivandrum-Pappala Concept Bikes +91 9048990409; 0470 -2670047	0471-2334621 Trivandrum - Vetturoad - Kazha kuttam Concept Bikes	Choudhari Tractor Agency +91 7869209584 0755 - 2735762
+91 9072623506 Perinthalmanna ABC Motors +91 9750000000; 9447158400; 9447718200	Trivandrum - Fayaz Building Concept Bikes +91 9048990172; +91 9048990693	Thiruvananthapuram - Pappanamcode Sivaji Motors +91 7736066716; +91 7736207777	+91 9673993304 +91 9048990718 Wayanad - Chungam Tempest Automotive SBY +91 8111999351; +91 8547861000	Bhopal - Padmanabh Nagar Ananya Auto +91 7389930805 0755-4249299

MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH
Chattarpur - Sagar Road Classic Wheelz +91 9644700706; +91 9644700704	Dhar - Near St Theresa School Aaryashree motors	Indore-Annapurna Road Jagdish Motors +91 9522309069; +91 9522309072	Jabalpur Royal Thumpers Unit II +91 8982208686; +91 7614924133	Ratlam-Mitra Niwas Road Galaxy Motors +91 8889997392; +91 9644002076
Chhindwara - PG Collage Road Rahul Royal Motors	+91 9589156027; +91 7292400900	Indore - Nehru Market Krishna Motor Agency +91 7314237509	Jabalpur Varun Motorcorp India LLP +91 7024144421	Sagar - Bhagwanganj Royal Cruisers Pvt Ltd
+91 8889999603 07162-245255	Gwalior-Shivpuri Link Road Somya Motors Pvt. Ltd +91 7773000124;	0731-4237509 Indore - Sayaji Club road RR Automotive	Katni Royal Thumpers A Division of Superior	+91 8225003194; +91 8225003195
Chhindwara Vaishnavi Autoriders +91 7067721900	+91 7773000127 Gwalior-New Saket Nagar	+91 8878660100 Hoshangabad - Kheda	Automobiles Pvt Ltd. +91 8223001286 07622-226474	Sagar Road - REWA Ashish Motors +91 9522240078;
Damoh Kuber Automobiles +91 9425095911	Big Boyz Motorcycles +919165829992; +91 7514926099	Jaggi & Sons Super Automotive LLP +91 9340344487 07572-230230	Khandwa Binwani Motors +91 9425909302 +91 7332244222	+91 7662490122 Satna - Panna Khajuraho Road
Dewas R R Motorcycles +91 7272402070 +91 8269270709	Harda Sant Singaji Motors +91 91111110189	Jabalpur Royal Thumpers +91 8962010072 0761-4925133	Khargone-Bistan Road Prabhu Motors +91 9340901615; +91 9179920202	Manish Motors +91 9179694840 07672-251607

MADHYA PRADESH	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Sehore-Sekdakhedi Choudhari Tractor Agency +91 7999184979; +91 7562401016	Ahmednagar Newaskar Automobiles +91 8928800800; 8087500900, 0241-2470800 Akola - MIDC Agrawal Motors	Aurangabad-Pandharpur Godavari Royal Enfield +91 9028069555; +91 9146068555 Beed - Shivaji Nagar	Chiplun-Karad Chiplun Highway A K Autoriders +91 8669686804; 2355256057 Dhule - Awadhan	Jalna - Amrai Madhu Motors +91 7249638764; +91 9421470987 Kolhapur - Near
Shahdol - Opposite Christian Hospital	+91 7768003305 0724-2258259	Shiva Motors +91 9765924477 Buldhana-Khamgaon Road	Surbhi Motors +91 8124848822 +91 7057010237	Dharmnagar Motor India +91 9075029077
Gupta Automotive +91 8602296300 0765 2231967	Amravati - Opposite Saturna Bus Stop Bhans Automotive +91 8237288224	Samyak Automotive +91 8788849336; +91 9922900038	Gondia - Goregaon Road Ved Automobiles +91 7030907024;	02312 521289 Kolhapur-Sankeshwar Road Yashashri Motors
Ujjain - Nanakheda Avis Auto	0721-2510636 Aurangabad-Bansilal Nagar	Chandrapur - Beside Wadgaon Police Chowki	+91 7182231144 Jalgaon-Ayodhya Nagar, Usha Motors	+91 9527094848 0232 7225088
+91 9424025067 0734-2520007	S.K.Y.S Automobile +91 9028059252 0240-2350652	Dinesh Motors +91 8550991151; 9082111383, 7755979799	+91 7767006658; +91 9370822828	Latur - Ausa Road Prisha Motors +91 7769973177
Vidisha - NH 86 Adventure Bike +91 9300168329 0759-2408222	Aurangabad-Chikalthana Cherry Corporation +91 9446120702; 9225315024, 0240-6630125	Chandrapur-Dhanora Road Dinesh Motors +91 7391880007; 7774031424; 7755979733	Jalgaon - Near Godavari Engineering College Usha Motors +91 7768009992; 9168690406, 0257-2271666	Latur - Udgir Sairaj Wheel +91 8421373999 02385-254417

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Malegaon - Kanchan	Mumbai - Kantilal	Mumbai - Sai Nagar,	Mumbai - Thane -	Mumbai - Virar
Vehicle Complex	Maganlal Estate	kandivali (w)	Belapur Road,	SP Wheels
Shaurya Motors	Soniya Motors Pvt. Ltd	Voyage Motors	Soniya Motors Pvt. Ltd	+91 7420026685;
+91 2332623040	+91 7710937759	+91 9146871013;	+91 8291842109;	+91 9370918152
02554-661128	Mumbai - Opp Shastri	022 -28087882	+91 7710937759	Nandurbar - Dhule Road
Mumbai - Borivali East Voyage Motors +91 7045034302; +91 8424050855	Nagar Ishna Wheels +91 9619547462 Mumbai - Opposite Trauma Hospital	Mumbai - Sakinaka Synergy Auto Inc +91 8828820002; +91 8286046565,	Mumbai-Thane - Opp-Telephone Exchange Pooja Motors +91 9594091669	Dinesh Wheels +91 9673298999; +91 9823104476 Nagpur Behind Immamwada
Mumbai - Chembur Motokraft Automobiles +91 9819791510; 2225200518	Voyage Motors +91 9146871003; 022 28328280 Mumbai - Opp. Yogi Tower	022-28590085; 28590086 Mumbai - Shivram Seth Amrutwar Road First Mumbai Store LLP	0251-2470600 Mumbai-Thane - Opp-Maruti Showroom	Police Station Paragon Traders +91 7276356401; +91 7276599069
Mumbai - Kurla W	Unison Automobiles	+91 9152007363;	Pooja Motors	Nagpur - Kamptee Road
Synergy Auto Inc. Phoenix		022-24917777	+91 8104909325;	Ved Motors
+918828820001;		Mumbai (ASP) Sion	+91 9833890507	+91 7030907017
8286046565	Mumbai - Pitamber Lane	Panvel Highway	Mumbai - Thane SV Road	0712-2652222
Mumbai - Kusum Villa	P. R. Emterprises	Ram Motorcycles	Soniya Motors Pvt. Ltd	Nagpur-Opp Mata mandir
Ishna Wheels	+91 9833063914;	+91 9323025335	+91 9768777696;	Shri Krishna Automobiles
+91 9619547462	022 62370093	022-27700396	+91 7710937759	+91 9561607151

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Nagpur-Wardhaman Nagar Shri Krishna Automobiles +91 7387325554; 7410061121, 0712-3191202	Osmanabad - Near Central Bank Hatlai Auto +91 9834972085; +91 9763138888	Pune - Fathima Nagar Platinum Auto +91 7755932584; 7030911281, 7755932579 Pune (ASP) - Hingne Khurd	Pune - Near Kanak Hotel Dhone Automobiles +91 7028978074; 7028978073; 8600400898 020-24273335	Pune - Opp. Manoharnagar Gate Kings Auto Riders +91 9146054611;
Nasik - New Bombay Agra Road Ostwal Auto +91 7720099945	Parbhani - Jintur Road Chandrallama Automotive +91 7767918999;	Sadguru Service Station +91 8308048854; +91 9011078854 Pune - Market Yard Road	Pune - Next To Lexicon School Chopada Motors LLP +91 9172202401;	+91 7720025451 Pune - Opp Suryadatta College Siddh Auto
0253-2592717 Nasik - Satpur Moharir Auto Pvt. Ltd.	9763300021; 9763300022 02452-242299 Pune - Behind Giant Cycles	Dhone Automobiles +91 8600400898; 2024265002 Pune - Narayangaon	7219365256; 9172202401 Pune - Next To Hyundai Showroom	+91 9673156622; +91 9834491631 Pune - Pavitra Building
+91 7447447007 0253-6630000 North Goa -Bardez	Brahma Motors +91 7888002052; +91 7888098383	Kings Royal Riders +91 9075009831 0213-2243342	Hridaan Motors +91 8669995207; +91 7720099622	Kings Auto Riders +91 9146054611; +91 8696900842
Royal Enfield Service Centre +91 9607938750; +91 9370918156	Pune - Behind Max Neuro Hospital Dhone Automobiles +91 7028045686; +91 7028045684	Pune - Near Sadhana Sahakari Bank Jay Motors +91 8669630091; +91 7020118088	Pune - Old Pune Mumbai Highway Brahma Motors +91 7888002031; +91 7276309977	Pune - Shriram Heights Siddh Auto +91 7249645494; 0211 3252050

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Pune Solapur Highway -	Raigarh(mh) - Chendhre	Satara- Opp. to Nimbkar	Solapur - Latur Road	Thane - Bhiwandi
Indapur	SK Autoriders	Seeds	Chavan Motors	S.R.MOTORS
Sahyadri Auto	+91 9146198305	Adved Motors	+91 7720069988;	+91 7208249149;
+91 7387111109;	02141-223030	+91 7888015003;	8805568000	7506044995
+91 7387111125	Sangamner-Near	7888015005	Solapur - Near City	Thane - Near GCC Club
Pune - Telco Road	Panchayat Samiti	Satara - Satara Koregaon	Hospital	Unison Automobiles
Hridaan Motors	Newaskar Automobiles	Road	Mondhe Motors	+91 9821115964;
+91 7720062111;	+91 8446700200	Nand Enterprises -	+91 8237466443;	7506555040, 022-28456620
+91 7720062110	Sangli - Chandanwadi,	Satara	2172735084; 9423591471	Thane - Kalyan
Pune - Wakad Opp. Orittel Hotel Kings Auto Riders +91 9146054611;	Miraj Hare Madhav Motors LLP +91 9604533332; 8806705170	+91 7030915141 02164-242772; 2162246255 Sindhudurg - Gudhipur	Solapur - Jamdar Road Jay Motors +91 9881885544; 8983300800	Ambernath Road S R Motors (A Unit of Riya Motors Pvt. Ltd) +91 9324283834 0251-2700044
+91 7720025458 Purna road-Nanded Nandi Motors +91 8975943376;	Sangli - Sangli Madhavnagar Road Abhay Motors +91 7219748881; 0233-2623041	SWASTIK MOTORS +91 9773878009; 9673878009 Solapur - Bale Chowk,	Solapur - Pune Road Mondhe Motors +91 7028060002; 8793000073, 9423591472	Thane Gita Udhyog Nagar SP Wheels +91 8446011103; 7420026687
+91 9284526982	Satara - Khandobanagar	Pune Highway	Tararani Chowk -	Thane - MIDC Tarapur
Ratnagiri - MIDC Mirjole	Nand Enterprises Karad	Chavan Motors	Kolhapur	SONITH MOTORS
A K Autoriders	+91 9637622706	+91 7720069988;	Motor India	+91 7066032696;
+91 9822133300	02164-241771	8805568000, 0217-2352424	+91 9822551777	8291101575

MAHARASHTRA	MIZORAM	New Delhi & NCR	New Delhi & NCR	New Delhi & NCR
Yavatmal - Darwha Road Aaditya Riders Pvt Ltd +91 8379914333 +91 9158632833	Aizawal Lawma Enfield +91 8794386109 0389-2333726	Delhi - Dwarka Cruiser Motors Pvt Ltd +91 8459223833 Delhi - GT Karnal Road	Delhi - Paratparganj Asco Motors +91 9953030780 011-2214888	Delhi - Shahadra Amar Autos +91 9990092800 011-43595322
MANIPUR Imphal West - Singjamei Sanamahhi Motors +91 8259061597; 7085011401	Chanmari-III-Opposite faith Hospital, Alpha Riders +91 7005800904; 9612332684	Kay's Auto +91 7838302323 011-28877011 Delhi - Kailash colony, Okhla Indust. Area South Delhi Motorcycles	Delhi - Roshanpura Outer Delhi Motorcycles +91 9540941610; 9540151107 Delhi - Rama Road, Kirti Nagar	Delhi - Naraina Centrum Motorcycles LLP +91 9821898940; 011-45627888 Delhi - Tilaknagar Lamba Enterprises Pyt Ltd.
Kakchingndo - Thoubal Kakching Motors +91 8837238120; 9366056182	NAGALAND Dimapur Uniglobe Enterprises +91 8794748906;	+91 9560088256 011-46121558 Delhi - Kanjhawala Road Soni Automobiles	Lamba Enterprises Pvt Ltd. +91 9250919993 Delhi - Village Samalka Kapashera Outer Delhi Motorcycles	
Tipaimukh Road - Churachandpur PAUL'S MOTORCYCLES +91 7085256617; 7629010170	8794748905, 0386-2225903 Kohima - New Secreteriat Road KK Motors +91 6909145859	+91 9910477162 Delhi - Mahipalpur Extension Kay Tee Automobiles +91 9910884777 011-40452477	+91 9540941601; 011 40244382 Delhi - Rithala Village North Delhi Motorcycles +91 8130495936 011-27054738	South Delhi Motorcycles +91 9560088256 Delhi (ASP) M.G. Auto Sales +91 9810237417; 9212337417

New Delhi & NCR	New Delhi & NCR	New Delhi & NCR	New Delhi & NCR	ORISSA
East Delhi - South Ganesh Nagar Amar Autos +91 9899173700;	New Delhi - Nangloi Soni Automobile +91 9667991433; 011-40114704	Northwest Delhi- Wazirpur Industrial Area United Automobiles +91 7290037111; 011 - 40392485	NCR Gurgaon - Old Delhi Road Aman Automobiles +91 9811247041; 9811247048, 0124 4232562	Mayurbhanj-Janardanpur Legend Automotive +91 9178024417; 9040078001 Bhadrakh
8448988947 New Delhi Company Store Saket	North Delhi - Mayapuri ind area Ess Aar Motors	Southwest Delhi- Mayapuri Industrial	NCR Gurgaon - Sheetala Mata road	Jyotshna Automobiles +91 7852940689
New Delhi +91 7533006563; 8800227951; 011-42575017	+91 9212505072 011 45065636	Phase 2 Sunshine Automobiles +91 9167640122;	Brawn Automobiles +91 9999240509 0124 4251481	Berhampur Vaishnavi Automobiles +91 8118058820;
New Delhi (ASP) Balaji Motors +91 9350102768	North Delhi - Ignou Road Ess Aar Motors +91 8745012373; 9355100512	NCR - NIT Faridabad Sohan Auto World	ORISSA Angul - Turang Green Treet Automotive	7682833574 Bhubaneshwar - KIIT Road, Sishu Vihar Gugnani Automobiles
011 23364241 New Delhi - Libaspur GT	North Delhi - Opp. Jhandewalan Mata	+91 9811535853 0129-4029352 NCR Gurgaon - Mehrauli	(P) Ltd +91 9124200009 +91 8249467198	+91 9776160313; 9040510010 Bhubaneshwar - NH 5 -
Karnal Road BNT Motors Pvt Ltd +91 9717391900; 8287540000	Mandir Ess Aar Motors AC +91 8750888863; 8750888861	Road Manzil Motors Pvt. Ltd. +91 8448186211 0124 4231683	Bargarh - Haldipali Shree Shyamji Bike Point +91 9439482033 +91 7381053255	Patrapada Trupti Autoworld +91 8480613910 0674-2470148

ORISSA	ORISSA	ORISSA	PONDICHERRY	PUNJAB
Bhawanipatana Shyamkrishna Mart pvt ltd +91 9437845001; 8480454792	Jeypore Golden Motors +91 7684941468; 6854242186	Odisha-Khorda Royal Automobiles +91 7606000454; 7606000453	Karaikal-Kamarajar Salai Rooster Automobiles 04368-228800, 8489155655, 7639001047 Mudaliarpet - Ansari	Barnala Megan Autos +91 9878120088; 9878120077
Cuttack - Arunday Nagar Anmol Motors +91 9853805091; 8596988122	Keonjhar Sai Automobile +91 9437054807; 9114611733, 9437004711	Puri Odisha - VIP Road PGS Motors +91 7440004430; 6752255004	Duraisamy Nagar Rooster Automobiles +91 7639001093; 7639002019, 0413 - 2355330	Batala Moon Autos +91 9888968616; 9872655955
Cuttack - Phulnakhra Khimji Automobiles LLP +91 9937022588; 7735286061	Odisha-Balangi Loyal Automobiles +91 9438284438	Rourkela The Agents & Distributors +91 9238111010 Sambhalpur	PUNJAB Abohar Aman Auto Zone +91 9988767900	Bhatinda-Goniana Road Ajay Autos +91 7696582460; 9988678145
Dhenkanal - Station Bazar Shivay Motors +91 7978329039;	Odisha-Nayagarh RAHUL AUTOMOBILES +91 9658327668	Sreyasri Motors +91 9040015359; 8339012626	Amritsar Aaray Motors +91 9517777404; 9517777402	Bhatinda - Mansa Road Krishna Automobiles +91 8725086111;
6762228585 Jajpur Road Birendra Motors +91 8763734599; 9078886305	Odisha - Near Jyothi Hospital Favour Ride +91 9583396524; 90400557156	PONDICHERRY Pondy-Karuvadikuppam Rooster Automobiles +91 7540040517 0413-2355336, 2355330	Amritsar - Opp: Guru Harkrishan Public School Jaycee Motors Corporation +91 9888968616 +91 9780020875	8427713060 Kapurthala - Tanda Road S.S.Motors +91 9814399532; 7526866622

PUNJAB	PUNJAB	PUNJAB	PUNJAB	PUNJAB
Hoshiarpur - Chandigarh Road Mahilpur Motors +91 9888280660; 9915125033; 9915182446	Ferozepur Royal Hut +91 9463771900; 9501601284 Ferozepur- NH - 54, Amritsar	Jalandar-G.T.Road - Near BSF Chowk Navyug Motors +91 9462802828; 9875938123, 0181 - 2223966	Khasra no - 361, Amritsar Jaycee Motors Corporation - Unit II +91 9888968616; 9780020875; 9780020942	Ludhiana - Gurudev Nagar - Ferozpur Road Barnala Automobiles (Jagroan) +91 9780014995 0161-2424114
Fatehgarh Sahib - Sirhind Road Morinda Motorcycle Centre +91 9650494609; 9815467373; 9815660557 Faridkot	Royal Hut Unit - II +91 7087799707; 8728080663 Gurdaspur Ajit Motors +91 9888968616; 9781369204, 7888738523 Hoshiarpur	Jalandhar - Kapurthala Road Fateh Motors +91 8725001278; 9530907183 Kapurthala	Ludhiana - G.T Road Kishori Automobiles +91 9780624283; 9914330903 Ludhiana - Dholewal - GT Road Sant Motors	Mansa - Sirsa Road Ganpati Motors +91 7009442352; 9779550668, 01652-236899 Moga - Dunneke Bikram Sales Corporation +91 9855914072, 7529081509, 9914488007
Baba Farid Automobiles +91 9780247048; 8288837048, 01639-251343 Fazilka Aman Auto Zone +91 9988700765; 6283599573	Lagwal Automobiles +91 9256514321; 7696197579 Jalandhar - GT Road Fateh Autos +91 9462802828; 8725001277	+91 9462802828; 8196900736; 9357254736 Kharar - Near KFC Manmohan Motors +91 8999200016; 9988317366, 0160 5034822	+91 8872496020 0161-2542307 Ludhiana - Basti Jodhewal Ashtavarkra Auto Pvt. Ltd +91 8725092030; 7665010100; 8725092401	Mukherian Lagwal Motors +91 9988048699; +91 8437917782 Muktsar Deep Autos +91 8427626855; 9855794932, 9914155055

PUNJAB	PUNJAB	PUNJAB	PUNJAB	RAJASTHAN
Nabha Partap Automobiles +91 7665010100; 7087990522, 9872605400	Patiala-Chandigarh Road Gurukirpa Motors-Unit II +91 9875940007 Patiala - Rajpura Road	Verma Automobiles +91 9569866078 01672-223273	Zirakhpur Garg Auto zone +91 8427656388; 8999200016	Barmer Devrath Motors Pvt. Ltd +91 7230077802 02982-223381
Nakodar (ASP) Bhagwati Automobiles +91 9462802828; 9357242788, 9988714870	Sukhdev Automobiles +91 7888671389; 9592781778, 0175-2305721	Sangrur-Sajida Colony Om Automobiles +91 9872802403; 8054944713; 8054944719 Sultanpur Lodhi	RAJASTHAN Ajmer - Ghooghra Jogbala Motors Pvt Ltd. +91 8829813113	Bharatpur Khusali Motors +91 7230094310 Bhilwara
Nangal Nangal Motors +91 9888280660; 9478609760, 01887-229160	Patiala - Sirhind Road Gurukirpa Motors +91 9650494609; 7087752225; 9779222225	Dalbir Motors +91 9462802828; 9878955621; 9814679432 +91 8528568566	0145-2787999 Ajmer- Vaishali Nagar Ajmer Motorcycles +91 7412029114 0145 2972500	Soni Automobile +91 8829974706; 9001297666
Nawanshahar - SVS Nagar HS Enterprises +91 9417654888; 9462802828; 6239096599	Phagwara Khalsa Automobiles +91 9462802828; 9041477770	Tanda Sandeep Automobiles +91 9888280660; 7340963586; 9914554304 01886-502398	Alwar -Tijara Road R.S. Motors +91 8696900842; 9119167272	Bikaner Bikes Pvt Ltd +91 9772657449 +91 8875012345 Bundi
Pathankot Cashmir Sales Corporation +91 9988005308 0186-2220148	Ropar Garcha Automobiles +91 9888280660; 9464700267, 01881-228137	Taran Taran Chabbra Auto Agency +91 9888968616; 8264647656	Banswara Veer Autolinks +91 9116670138 02962-254135	Ramdutt Automobiles Pvt Ltd +91 7597212390; 7472444803

RAJASTHAN	RAJASTHAN	RAJASTHAN	RAJASTHAN	RAJASTHAN
Chittorgarh Manglam Motocorp +91 8505059900 01472-297018	Ganganagar - Near Teen Puli National Motors +91 9414211956 0154-2444200	Jaipur - Tonk Road Aditi Motors +91 9828605711 +91 8875096035	Jodhpur- Opp. New Power House Modern Motor Bikes +91 7222011197	Pali Road Sumerpur VRS Motors LLP +91 7412080385 Phalodi-Adarsh Nagar
Churu-Sainik Basti Churu Balaji Motors Pvt Ltd +91 9649807777 01562-253777	Hanumangarh Udai Motors +91 9828129060; 9772780001, 01552-226266 Jaipur-Sodala -	Jaipur (ASP) - Sudershan Pura JMS & Co +91 7239902225; 9460345047	Kota Mundra Motors Pvt. Ltd. +91 9887178680; 9887278680	Shree Rajpurohit Automobiles +91 9001562000; 7728821912, 0291-2755550 Sawai Madhopur
Dausa Ashirwad motors +91 8560079781; 1427223925	Giitanjali Towers Company Store Jaipur +91 8939991369 0141 4106747	Jalor Achal Gavri Motors +91 7231919196 +91 7231919198 Jhalrapatan (Jhalawar)	Kota Urs Automobiles pvt ltd +91 8739995500 Kotputli	Vachi Motors Private Limited +91 6376167131; 7462233933 Sikar - Jaipur Road
Dholpur - Tor Ka Pura Digvendra Motors Pvt. Ltd. +91 8000534229	Jaipur - Govind Marg Rajesh Motors (Raj.) Pvt Ltd. +91 9414061714; 0141 3027696	Smart Choice Automotive +91 9772167555; 9875720318	Shree Motors +91 9116011113; 7413860860	Apoorva Motors +91 9982787183; 9667237183; 8827188893
Dungarpur MANGLAM MOTORS +91 7427826333	Jaipur - Mansarover Aditi Motors +91 9887289552; 8290596440	Jhunjhunu Balaji Motors +91 7733022411 01592-231061	Nagaur D.D.Autotech +91 9828943737 01582-243006	Udaipur Voyage Motors +91 9799144460; 7340069355, 0294-2467465

RAJASTHAN	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Udaipur - Shobhagpura Circle The KPM Motors LLP +91 9116124507 TAMILNADU	Chrompet - Thiruneermalai Road The Legend Motors +91 8606377788 044 - 22412005	Chennai - Kelambakkam Vardhan Automobiles +91 9962950004; +91 9092604448 Chennai - Mylai Balaji	Coimbatore - Near Tidel Park, Peelamedu Royal Enfield Company Store +91 8110013259;	Coimbatore - Palakkad Road Bharat Motors +91 8754336600; 9715722600; 4259234150
Anna Nagar - 11th Main Road Rudraa Motors +91 44 2628 8888 / +91 7550226014, 7550226013	Chennai - Ekkattuthangai Sreehitha Auto Zone +91 9591073735; 9043011094, 044-65906590 Chennai - Ganesh Nagar	Nagar Sri Venkateswara Bike Zone +91 8754000180; 8681863330; 8124848822 Chennai - Kottivakkam OMR	8754341777; 8754342777 Coimbatore- Sathyamangalam Eagle Motor +91 9789666572; 9789666748	Coimbatore Palani Main Rd Bharat Motors +91 9715122600 Coimbatore
Arumbakkam - Chennai Rudraa Motors +91 7550226016 044 - 26214444	Sri Velavan Motors Pvt Ltd +91 7099705000 044 - 24761903 Chennai - Mount Poonamallee Road	Royal Enfield Company store +91 9686266228; 8939844508	Coimbatore-Singanallur BullMenn Motors +91 9514555510; 7092300000, 9514555513 Coimbatore - Near Old	Palladam Road Bikerz +91 7502387000; 7502687000, 0421-4252523
Chennai - Ambattur Classic Motorcycles +91 9445512022 044 - 42180206	Aravinduja Motors Private Limited +91 9176638781 044-45554888	Chennai - Purasaiwalkam I Speed Motors +91 9094633712; 9940662785, 044 45588047	Court M R Motors +91 8098566119; 7639111431	Thiruvallur - GNT Road AKG Motors +91 9597082579; 9597082578

TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Chennai - Thirumullaivoyal Dino Motorcycles +91 9962495557; 8939998650	Dindigul - Dhadi Kombu Road Rajendra Automobiles +91 8508678333; 7824929857, 8098666567 Dindigul - Sivagiripatti	Hosur - Krishnagiri Bye Pass Road Sri Saravana Motors +91 9543813032; 8220013432, 04344-297730	Karur -Near Andavar Chemicals Murugan Motors +91 9500955950; 9543255950	Madurai - Nethaji Nagar Classic Motors +91 9524099444; 9994906185 Madurai - PP Chavadi
Cuddalore - Imperial Road Rooster Automobiles +91 7639001046; 7639001031 Cuddalore Near Neyveli Arch Abi Motors		Hosur (ASP) - Seetharam Medu Sri Manjunatha Bullet Garage +91 9894955499 +91 7867064409 Kanchipuram - Vellai Gate	Kovilpatti - Ettyapuram Road Charles Motors - KVP +91 7338737501; 9944723062, 04632-225822 Krishnagiri Sree Maruthi Motor &	Classic Motors +91 9629023344 0452- 2387877 Madurai - Scot Road G.G. Motors +91 8012688444 0452-2342007 Marthandam
9384104001; 9384104044 Dharmapuri- Nallanahalli S.M.Motors +91 9994852482 04342-288123	Erode - Sathy Main Road Erode Motors +91 7402835044; 8883650000 Erode - Vellalapalayam Eagle Motor +91 9443313965; 9443312976		Auto Service +91 9159566615; 9159566613, 0434-3233512 Madurai - KK Nagar Madras Motors +91 9976755111 0452-2585686	ROYAL PHOENIX MOTORS PVT LTD +91 8012409555 Medavakkam - Opp to Ulavar Sandai Sri Venkateswara Bike Zone +91 8754000182; 7338834120

TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Mettupalayam - Near Bogaiyan Layout M.R. Motors +91 +91 7639111431	Perambalur - Venkatesapuram V.P Motors +91 9159394114	Salem-Seelanaickenpatti MSV Motor +91 9566661316; 9566669990	Thanjavur - Muthupillai Mandapam A.V. Motors +91 8406803306	Thiruvottiyur-New Washermenpet DCS MOTORS PRIVATE
Nagapattinam-Pechavadi A.V. Motors 04364252177	7373799687; 7373799686 Portblair-Dollygunj	Salem - Udayarpalaym K.R.K Bikes	0435-2412587 Thanjavur - Naaveeth	HIMITED +91 7338871723; 044 - 25911105
Namakkal-Katchery Street Royal Annanmar +91 8883580877; 8883178777	Nikhil Motors +91 9474205035 Pudhukottai Sri Maruti Motors	+91 9498427031; 9498427006 Sevoor- Vellore Main Rd	Complex JAF Associates +91 7867019836; 7867019837, 04362-254786	Thiruvarur - KTR Estate Shri Balaji Motors +91 7397768020;
Namakkal - Salem Road Royal Annanmar +91 8883150077;	+91 7094450431; 04322 - 267877 Ramanathapuram -	-Thiruvannamalai Akan Agency +91 9043261535; 9751059933, 7845330209	Theni - Gudalur Main RD Coral Moto Hub 4554271334; 271335	04366 - 251704 Thoothukudi- Ettayapuram Rd
04286-277557 Ooty - Thalayathimund M R Motors +91 7094999294	Madurai Main Road Murugan Motors +91 9578207000;	Sivakasi - Thiruthangal Leo Motors +91 7397772779;	Theni - Sukkuvadanpatty Coral Moto Hub +91 9698933000	Charles Motors +91 7867015250; 7867015251, 0461-2321636
Pedhikuppam Village Gummidipoondi AKG Motors +91 9087886653; 044 -27928063	04567-227000 Salem - Four Roads Chamundi Enfield +91 8098611999; 9626146261	04562-230669 Sivagangai - 120 Feet Road Nehaa Motors +91 9865055228; 04565 -225008	04546 - 253337 Thiruvannamalai-Kanchi Main Road AKAN Agency +91 9843033861	Tirunelveli - Opposite to Irt Polytechnic DG Motors +91 8973846699; 4622970031

TAMILNADU	TAMILNADU	TAMILNADU	TELANGANA	TELANGANA
Tirunelveli - Sivanthi Nagar RK Motors	Trichy - Magilambu Salai Oxina Motors +91 7402718512 0431-4217793	Virudhunagar-Chinna- moopanpatti Village Siva Motors +91 9655466688;	Hyderabad - Bahadurpura VVC Automobiles +91 9100087536; 7337555542	Hyderabad - Miyapur Main Road Headway Motors +91 9959935151;
+91 8300099309; 8300099310; 04633-280043	Vengathur - Manaval Nagar	04562-266688	Hyderabad-Bowenpally SVR Motors and	9618394567
Tirupattur-Vaniyambadi Main Road	Gap Motors +91 7200341320	TELANGANA HYDERABAD & SECUNDARABAD	Engineering 040-40116336 Hyderabad - Gachibowli	Hyderabad - Moosarambagh Road Dark Matter Motorcycles
AVS Agencies +91 7010662783;	044 - 27641989 Vellore - Viruthampet Sri Kalikambal Autos	Adilabad-Mavala Ashwik Motors	Road Go Green Motors India	+91 8886678930; 8886676041
9944300176 Tiruppur - Dharapuram	+91 9566874010; 9047752205	+91 8732297999; 8297988776	Pvt. Ltd +91 8019235111; 9640737222	Hyderabad-Nagole Road - Near RTA Office
Senthur Motors +91 9442502011; 04258-225345	Villupuram Rooster Automobiles 04146-222280 ,	Ghatkesar-Shiva Reddy Guda Main road C K Riders	Hyderabad-Karmanghat Taurus Motors KMGT +91 7997828787;	Royal Engineers +91 9959331755; 7093991755
Tirupur - Periyar Colony RIDERZ	7639001008; 8489144744 Villupuram - Near Balamurgan Hospital	+91 9704511755 Hyderabad - Jubilee hills VVC Automobiles	040 29887368 Hyderabad-Madhura Ngr Colony	Hyderabad - Near Narjuna Model School Headway Motors
+91 8098201774; 0421-4961313	Garuda Automobiles +91 8489144944	+91 7842883883; 9100087535	Orange International 040 40215215	+91 9100085774 +91 9100085775

TELANGANA	TELANGANA	TELANGANA	TELANGANA	TELANGANA
Hyderabad-Near Telugu Academy Jayasree Automotives +91 9603928555 +91 9010369555	Hyderabad-Zafferguda, Mehidipatnam Venkataramana Automobiles Pvt Ltd +91 9100087527	Khammam- Sathupally Hemanth Automotives +91 7288797222 Mahabub Nagar - Yenugonda	Medak - Hyderabad road Anil Motors +91 9339345999; 9339567999 Medak-	Nalgonda- VVC Complex Vijayalakshmi Automotives +91 8885966687
Hyderabad-Yashoda Hospital Road Jayasree Automotives	Karimnagar - Bye pass road Quality Motors	Harshithh Automotives +91 7660022334 Mahabubnagar road - Mahabub Nagar	Ramachandrapuram, BHEL Go Green Motors India	+91 7288999935 Nizamabad KY Motors +91 8885198222;
+91 7093612612; 7680999505 Hyderabad-Prasanth	+91 9966173000; 9030313913, 0878-6509993 Khammam - Mamatha	Harshithh Automotives- NGKL +91 9642555328;	Pvt. Ltd +91 8712126633; 7207294242	8462236882, 08462-236882 Secundarabad-Begumpet
Nagar, Vanasthalipuram Taurus Motors +91 8125828787 040-29804755	Hospital Road Royal Automotives +91 9963886789	799555328 Mancherial J V Aryan Motors +91 8179356458 +91 8297388775	Nalgonda Sri Lakshmi Pavan Automotives +91 8886677962;	Kayjee Engineers +91 9246113133 040-27907444 Secundrabad- Keesara,
Hyderabad-Sanath nagar Royal Enfield Brand store 040 23701235; 040 23702255	+91 8297536789 Khammam - House No 4/12 Royal Automotives +91 8297616789	Mancherial Road, Divya Nagar Ashwik Motors - Nirmal +91 8297388776; 8297988778	Nalgonda - Survey No 288 Vijayalakshmi Automotives 8886677969	Nagaram Village Orange International +91 9348093481 +91 9177501501

TELANGANA	UTTARAKHAND	UTTARAKHAND	UTTARAKHAND	UTTAR PRADESH
Secundrabad - Near Trimulgherry Signal SVR Motors +91 9133322925; 040 48554541 Warrangal-Hanamkonda Quality Automobiles +91 9030775252 +91 7661850444 Warangal SV Motors +91 8702433888; 9395144955	Almora Kumaon Motors +91 7249929233; 9411319601 Dehradun - Ballupur Chowk Ahuja Enterprises +91 9927532535 0135-2710377 Dehradun - 6-B, Niranjanpur Allied Auto Agencies +91 7088909955; 7088909988, 8006908908	Haldwani, Nanital Suri Sales (P) Limited +91 9359108047; 7351007963 Kashipur - Near city stadium Batra Enterprises +91 9927309718; 9100536026, 05947-277207 NCR - Ghaziabad - Nehru Nagar Rawal Automobiles Pvt Ltd +91 9211921227 0120-4986443	Rishikesh-Sarvha Nagar Ranjeet Motorcycles +91 8755333113; 8273941313 Rudrapur-Brar nagar, rampur road Brar Motors +91 7055900098 05944-2473127 Udham Singh Nagar - Sitarganj Road Chaudhary Automobiles +91 7452954444; 9027276202	AGRA - NH 2, Sikandra Agra Royals +91 7055312114; 7055312110 Agra - Opp.DIG Residence Baluganj Shambhavi Automotive Engineers +91 8057400022, 8057400055 Agra-Trans Yamuna Colony Mangal Motors Private
Agartala - Tatipara XED Motorcycles +91 8794220162; 8837431879	Dehradun- Rajpur Road Allied Auto Agencies +91 7900888999	Pauri Garhwal Choudhary Automobiles +91 9634274988 01346-250555	UTTAR PRADESH Akbarpur- Ambedkarnagar,	Limited +91 9105900111 Aligarh - Nr Banna Devi
Agartala-West Tripura PNR Automobiles Pvt. Ltd +91 9774174618; 7005700174	Haridwar-Jwalapur Prem Auto Enterprises +91 9927994477 01334-250242	Roorkee-Haridwar Road Goswami Automobiles +91 8273524848; 7060306069	Faizabad Road Saurabh Automobiles +91 7317004022; 9936100215	Police station Maindola Royal Enfield +91 7618144044, 9319155055

UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH
Aligarh-Ramghat Road Kodia Auto Sales +91 7055520172; 7055520180	Badaun-Near FCI godown Omkar Motors +91 8477803704; 9520330305	Bansi Road - Sidharth Nagar Shiva Motors +91 9670222122; 9670222123	Bhadohi-Old Haddi mill Bhadohi Wheels +91 9598778888 Bareilly - Shahjahanpur	Deoria - Barhaj Road Supreem Motors +91 7703001099; 7703001082
Allahabad - Bai Ka Bagh Vrindavan Automotive +91 7860383786; 7860861786	Baghpat-Near Signet Automobiles Pitambra Automobiles +91 8077660919;	Barabanki; Nawabganj 225001 G.R & Company +91 7233002401;	R. K Autozone +91 7703009919; 7703009918, 8175049916	Etah - GT Road, Asroli K.S.Royals +91 7055215231;
Allahabad - Near Kamla Nehru Hospital Jay Pee Motors	7302973259 Balrampur Titu Automobiles	8174000978 Bareilly-Nainital road Suri Sales (P) Limited	Bijnor-Landmark Hyundai showroom Chaudhary Motors +91 7703001082;	7055215232 Etawah - Ram leela Road V P Motors +91 9568013106;
+91 8299731711 0532-6061003	+91 9540223120; 8318718119	+91 9359108047; 7351007963	9761042302; 8958994499 Bulandshahar-State	9568013109, 9568013105 Faizabad - Wazeergani
Amroha - Delhi Moradabad Road ADVIKA AUTOMOBILES +91 7055204444	Ballia-Opp-Nagaji School Parmarth Automobiles +91 7800378233; 9616960808	Bariely - Pilibhit Bypass Rd AJS RIDERS PVT LTD +91 9762100010 Basti - Didoha	Bank Colony Santosh Enterprises +91 9219404045;	Chawla Riders +91 9628770002 0527-8265078
Azamgarh - MAU Road, Sidhari Amit Motors +91 9532049985	Banda - Tindwari Road Sohum Riders +91 7704090000; 7571006173	pachpediya road New India Merchant +91 9838078667 554 - 2281483	7900785515, 05732-231326 Chandauli - Uttar Pradesh Shri Sai Automobiles +91 7311178055	Fatehpur- Near DM Awas K S Auto Sales +91 8574675809 05180-221223

UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH
Farrukhabad - Ghatiyaghat Road Ankur Auto Agencies +91 7678874000 6393143517	Ghaziabad-Patel Nagar II Shiva Riders +91 8448693811; 0120 4503203 Gonda	Hardoi Raj Royals +91 7081000521 Jaunpur- Azamgarh Rd	Kanpur- W-1/52, Saket Nagar S.S Automobiles +91 7705006411; 7705006413	Lakhimpur Kheri Shree Vinayak Motors +91 7071187827; 9169911999
Firozabad - NH-2, Nagla Bhau Emerald Automobiles +91 7251010888 +91 7251020777	Style N Passion +91 7311173067; 9919713001 Gorakhpur - Mughalpur,	Aditya Motors +91 9816258702; 7266051755 Jhansi - Near SBI	Kanpur- Near Govt Degree College Kamla Motors +91 7617666291	Company Store Lucknow +91 9636060111; 9044035044 Lucknow (ASP)-
Ghazipur- Bansi Bazar Shri Sai Chandra Automobiles +91 7571006174;	Chargawa MAK Bikes LLP +91 9793909000; 7081000899, 5512505500	Triveni Enterprises +91 8419099995, 7607779147	Kannauj -Akbarpur- Sarayghah Sampuranta Automobiles +91 9648250883	Near Goel Hospital Amafh Bullet Centre +91 7080811662 0522-4955003
7571006173 Ghaziabad-Loni ROYAL TAJ AGENCY +91 9871045697	Gorakhpur - Taramandal Shiv Motors (A Unit of Pardeshi Zigwheels Pvt. Ltd.) +91 7706900014;	Jalaun-Rath Road Singh Royal +91 7522000553, 9453021416	Hapur - Tyagi Market Anmol Automobiles +91 7217480005	Lucknow - 5A - Adarsh Nagar Shreya Auto World Pvt. Ltd. +91 7081109005
Ghaziabad-Near Mohan Nagar Flyover Sangam Autos +91 9311051177; 0120 2807331	9794241149 Hathras - Agra Road Manglam Royal +91 8395000563	Kanpur-Khalasi Line Sareen Motors LLP +91 7705905138; 8303907907	Kushinagar - Kasya Road, Chhawni Cantech Automobiles +91 7705803753; 7705803760	0522-4037677 Lucknow - A 1/1 Sec F Jankipuram Royal Motor works +91 7607777385

UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH	UTTAR PRADESH
Lucknow - (Hardoi road) Lucknow Diesels & Electricals +91 9044290442; 7232902010	Maharajganj-Chauparia Pharenda Road RK Motors +91 8574692821; 7706974520	Meerut - West Rithani, Delhi Road Nutech motors +91 7088714714; 7300960333	Muzaffarnagar-Panipal Road AJ Automobiles +91 9105099001; 9105099004	Noida - Opposite Fortune Hyundai Shree ji Automobiles +91 8448497600; 0120 4381777
Lucknow-Krishna Vihar colony M/s Shreya Auto World +91 8917705000; 0522 - 2442101 Lucknow Road -	Mainpuri - Bhawat Chauraha Rway Station Road GANESH MOTORS +91 9997899848; 9997899847	Meerut - 8, Shri Krishna Tower Moto Riders +91 8476900096 0121-4006001 Mirzapur - Nr. Binani	Muzaffar Nagar - Roorkee Road Harivansh Auto Agency +91 9917421427; 9219440446	Noida - Hosiery Complex Solitaire Automotive +91 9599195031; 0120 4547929 Pilibhit - Bisalpur Road Shankhdhar Automobiles
Near Banjari Moad Rudra Motors +91 7232900637; 7232900675	Mathura - NH-2, Nr. Jaiguru Dev Temple Aryaman Enterprises +91 8392912229;	College Vindhya Auto Sales +91 7310160009 Moradabad - Near pak	Nazibabad- Kotwali road Agarwal Tractor & Parts +91 7895417179 01341-230252 Noida-Gautam Budh	+91 7535877888 Pratapgarh-Near Angels School Shaurya Enterprises
Lucknow - Near Syndicate Bank Sardhana AYAN AUTO LLP +91 8126000697; 01237 236139	8392916228 MAU-Batwal, Nr Eicher Tractors Chandra Motors +91 7310266900	vada Akanksha Autozone Pvt Ltd. +91 7247800097; 6399991102	Nagar Shree Mahadev Agency +91 9310047588; 0120 4324662	+91 9918601127 Raebareli - Civil Line Sushma Motors +91 8953005001; 8090139778

UTTAR PRADESH	UTTAR PRADESH	WEST BENGAL	WEST BENGAL	WEST BENGAL
Rampur - Nainital Road Akanksha Autozone P. Ltd +91 7900600076; 6399991104	Varanasi- Chandpur Industrial Area Khurana Automobiles +91 9956462863	Barasat-24 Parganas The Country Motors +91 9903722883; 8272944511; 9903722883	Dankuni-Hooghly Universal Traders +91 9883069797, 9831018699	Howrah - Andul Apollon Motors LLP +91 9903800200; 9163253000
Saharanpur- Hanuman Road Sachdeva Enterprises +91 9045544778	0542-2373246 Varanasi-Maqbool Alam road, Nr DIG colony	Bardhaman - G T Road SG Automobiles +91 9434723500;	Darjeeling-Burdwan Road Legendry Motors Pvt. Ltd. +91 9775430000	Kolkata - AGC Bose Road Austin Distributors Pvt. Ltd 033-65552077; 46013101 Kolkata - Nowa para
Sitapur- Dhanipur Lucknow Road Raj Automobile +91 9076555726;	One Place Automobiles Pvt. Ltd. +91 7753888536 +91 7706871051 Varanasi - Mauza	9800940009 Bardhaman-Punjabi More SG Automobiles- Unit I +91 8609178409;	Dihimedanmolla-24 Parganas Austin Distributors Pvt. Ltd +91 7980995510, 9073684402	Kolkata Bike Zone +91 9674029373 033-40082380 Kolkata - Beck Bagan Row Shah Distributors
9450398371 Sultanpur - Kasba KNIT Asia Royal Motors +91 9170017590 05362-227777	Shivdaspur Varushka Automobiles +91 7572008103; 7572000655	9733212991 Bankura - Keranibandh R D Automobiles +91 9733522265	Durgapur R.H.Automobiles Pvt. Ltd. +91 9748402629, 8336935892	(Auto Division) +91 9051244044, 9830477788 Kolkata - Shakespeare
Unnao-Awas Vikas Colony Raj Auto World +91 7080903706; 7080903702	Varanasi-Shakti Nagar Highway Vishwanath Enterprises +91 7317582582	Bardhaman - Raghunathpur Tejgunj Sri Ram Automobiles +91 9800004533	Hatthuba - North 24 Parganas The Country Motors Habra +91 9830426397	Sarani East India Agro Indus. Pvt. Ltd +91 9874977006 033-23293137

WEST BENGAL	WEST BENGAL	WEST BENGAL
Malda - Station Road Speed Wheels +91 9735586333, 6295027567	Purba Medinipur-Ratnali Suhana Global Private Limited +91 7479035053	Taki Road - North 24 Parganas The Country Motors +91 8617540380;
Murshidabad-NH 34 Maxwheel Motors +91 9233330208; 9233330216, 03482-224844	Raiganj Kalyani Solvex Pvt. Ltd. +91 9083292066 Siliguri - Matigara	8697339136 West Bengal - Nadia Royal Automobile +91 8629961089
North 24 Parganas- Nilgunge Road Bishnu Oil Company +919874839911; 9073487770	Riders Corner +91 9083260131; 7319042570 Siliguri - 2nd Mile	West Midnapore Sri Sai Auto mart +91 7047678599
Purulia High way-Purulia Devi Motors +91 7365000580; 6295900922	Sevoke Road Siliguri Distributors +91 9832047670; 8016904935	
Purba Medinipur Shivani Automobiles +91 7477787028; 7477787030	Suri - Birbhum Birbhum Riders +91 7477714484; 9800145000	

PARTS STOCKIST DISTRIBUTOR

Andhra Pradesh Vijayawada Cyber Automobiles Pvt. Ltd +91 9959615806	Patna Moto Spares Pvt.Ltd +91 9097577727	Margoa Saini Motors +91 8308808290 0832-2740343; 2740345	JAMMU & KASHMIR Jammu Yahoo Technocra +91 9419191241	Bangalore Fixwheel Motors +91 9845949127 Kolar
Assam Guwahati Chirag Enfield +91 8136051810 0361 2670293	CHANDIGARH Chandigarh Manchanda Autos +91 9915047010;	GUJARAT Ahmedabad Shreeji Auto Traders +91 9173170931;	JHARKHAND Hazaribagh Riders Point +91 9234343422	Jagadamba Automobiles +91 9972522111 +91 9066983741 KERALA
Guwahati Pawan Automobiles +91 9864045473	9988994000 0172-2630263 CHATTISGARH	9724722282 JamNagar New Chandra Motor Cycle House	Jamshedpur Royal Auto Syndicate 72502-22283 Ranchi	Marikar Motors Ltd +81 9894744880
Achharsingh Royal +91 9707522666 BIHAR	Raipur Nagorao Auto Engg Works Pvt.	+91 9824211699 HARYANA Ambala	Sri Nivas Automobiles +91 7763801824 Zittau	Luha Automotives +91 7025106888 0495-2333533
Biharshariff PNN Automobile +91 9135620008	+91 9165878692 GOA	Royal Motors 0171-2545795 Bhiwani	Arjun Automobiles +91 7282820788 +91 8935849216 KARNATAKA	Ernakulam JR & Sons +91 9447063679
Chapra Supriyam Automobiles +91 9128739999 06152-242999	Mapusa Shauna Auto Agencies +91 8326520712	Sheoran Automobiles +91 7056732216 01664-252216	Bangalore Cyber Automobiles Pvt. Ltd +91 9448473078	Kochi Bhavani Auto Distributors +91 8086078173

PARTS STOCKIST DISTRIBUTOR

Trivandrum Subha Auto Wares +91 9446562640	Nagpur Siddarth Spares +91 9373195554	PUNJAB Amritsar Gee Ess Enterprise	Erode Senthilmurugan Auto Parts +91 9894756567	Lucknow-Transport Nagar Moped House Pvt.Ltd
MADHYA PRADESH Indore Royal Ventures +91 9589541950	Pune Planet Spares +91 9371005335	+91 9878930900 Ludhiana Amrik Singh & Co. +91 9915069033	Madurai Senthilmurugan Auto Parts +91 9500786567 TELANGANA	+91 9696202669; 8795444497 Lucknow
Jabalpur Bhawani Automobiles 094243-05880	Pune Shree Spares +91 9822377709	RAJASTHAN Jaipur-Indra Bazar Shubham Agencies	Hyderabad Cyber Automobiles Pvt. Ltd +91 7702143186	Varma Auto Sales +91 9335207393 UTTARAKHAND
MAHARASHTRA Aurangabad Vinod Agency +91 9823336611	New Delhi Kinematics Mktg (P) Ltd. +91 9654787802 011-41545025	+91 9680465973 Jaipur-Transport Nagar Shubham Agencies +91 9414067766 TAMILNADU	UTTAR PRADESH Ghaziabad Indian Automobiles +91 9999916346;	Dehradun Anamika Enterprises +91 9897615836 WEST BENGAL
Mumbai Rajkamal Auto & Scooter Spares +91 9833985931	ORRISA Bhubaneshwar Orissa Marketing Services +91 9437033935	Chennai Chennai	9899288337 Kanpur Sareen Motors +91 9389629505	Kolkata Auto Marketing Agencies +91 9830325490
Mumbai Ram Motor Cycle Co. +91 9920748891 022-27700394	Cuttack Bullet Plus +91 9437037590	Popular Motors Cycle Company +91 9698444568 044-43435365; 43435364	Lucknow-Kaiserbagh Moped House Pvt.Ltd +91 7408555502 0522-4108704	033-22360642; 22360643 Siliguri Goyal Royal Spares +91 9434063334

NOTES

NOTES



Part No. RAM00181/A

ROYALENFIELD.COM